

Reinke Operator's Manual

**Pivot and Swing Arm Corner System
with Advanced Main Control Panel**

Revision: E

5-2019

P/N: 117761



Table of Contents

- System Safety..... 3
 - Lockout / Tagout..... 4
 - Restoring Equipment to Service..... 5

- Safety Labels..... 8
 - Standard Panel 8
 - Tower Box..... 9
 - Tower Base..... 9

- Main Control Panel Layout..... 10
 - Main Disconnect Switch..... 10
 - System Power Switch..... 10
 - Water Supply Switch..... 11
 - Pressure Switch (Optional) 11
 - Generator Switch (Optional) 11
 - Direction Switch 11
 - Start Button (Safety Override)..... 11
 - Safety OK Indicator Light 12
 - Voltmeter 12
 - Hour Meter..... 12

- Precision Application Controller III (PAC III) Normal Operation..... 12
 - PAC III Display Detail 14
 - Table of Symbols..... 14
 - Scrolling and Non-Scrolling Text Messages..... 15

- Precision Application Controller III (PAC III) Setup..... 18

- Precision Application Controller III (PAC III) Programming..... 23

- Starting the System..... 31
 - About the Generator 32




- Primary Settings 33
 - System Speed..... 33
 - End Gun Settings..... 34
 - Cam Plate Switches (Optional)..... 35
 - End Gun Switch Ramp 35

Part Circle Operations	36
Pivot Center Options	36
Pivot Auto-Stop Option	36
Cam Plate - Pivot Auto-Stop Option	37
Tower Options	37
Tower Auto-Reverse Option	37
Tower Auto-Stop Option	37
Tower Barricade	38
 Options	 40
Disconnecting Spans	40
Chemical Injection	41
Chemigation	41
Fertigation	42
Insectigation	42
 Maintenance	 42
Wheel Gearbox Maintenance	42
Non-Towable Gearboxes	42
Center Drive Gearbox Maintenance	43
Three Phase (480 VAC) Center Drive Gearboxes	43
Single Phase (230 VAC) Center Drive Gearboxes	43
Initial and Preseason Maintenance	44
Maintenance During Season	46
Winterization Procedure	49
Swing Arm Maintenance	49
 Troubleshooting	 51

SYSTEM SAFETY

Reinke irrigation systems are designed with many electrical and mechanical safety features. However, each operator must read and understand this and all other accompanying owners manuals for the safe and efficient operation of your Reinke irrigation system. If this system is operated incorrectly, it can pose a safety threat to the operator and others, including serious injury or death. This system is powered by high voltage electricity. Any individual that will be engaging with the system in any way must read and fully understand the contents of this manual. This includes both the basic operation instructions (such as starting, stopping, adjusting water application amounts, and changing directions) as well as the safety obligations noted in this section.

In addition to the operational and safety information provided by this manual, you will also find safety signs and decals located throughout the system itself. For the safest experience possible, make sure you are able to locate and recognize every safety sign and decal located on the system. Throughout this manual, you will find safety information preceded by the words **Caution, Warning, or Danger**. These will be marked with a hazard symbol as shown below. Read each of these warnings closely, as they indicate potential hazards.

 Caution	<i>The Caution sign indicates that a situation, or action, may result in minor damage to property or harm to individuals.</i>
 Warning	<i>The Warning sign indicates that a situation, or action, may result in serious damage to property, injury, or death.</i>
 Danger	<i>The Danger sign indicates that a situation, or action, poses an immediate threat that could result in severe injury or death.</i>

Caution

Make sure you read and understand the operator's manual BEFORE operating, or maintaining, the system. If anything seems unclear, contact your local Reinke dealer.

Ensure that anyone else who operates the system reads and understands the operator's manual.

Follow ALL safety guidelines on the system and in this manual. Please keep in mind that any unauthorized changes made to the system could cause damage to that system.

Danger

DO NOT attempt to perform any maintenance procedures until the Reinke main control panel disconnect switch and all pump and other disconnect switches are locked in the OFF position. Electrical component troubleshooting and replacement should be performed by a certified Reinke Service Technician to ensure built-in safety features remain intact. This also ensures the system remains compliant with the National Electric Code and Reinke Manufacturing specifications. Replace all protective guards and shields before restoring power to the system.

 **Danger**

The movement of an electrically powered, gear-driven, irrigation system is relatively slow. Moving parts are exposed and may present a potential hazard. Therefore, keep all equipment, vehicles, people, livestock, etc. out of the system's path.


DO NOT allow anyone to ride, or climb, on the system unless they are qualified and required to do so for maintenance purposes.

The tower steps have been provided for access to the tower control boxes only. They are not intended for access to the span. For instance, should the sprinkler heads require service, use a ladder to reach them from the ground.

 **Danger**

DO NOT start the system until all electrical equipment has been properly installed and grounded by a qualified electrician. Failing to do so could result in serious injury or death. Ensure that your contractor has grounded the system as required by the National Electrical Code and by all applicable local electrical codes.

When towing a system from field to field, avoid ditches, rough terrain, overhead power lines, etc. The ground wire MUST be re-attached to the ground rod, or concrete-encased electrode, and checked for electrical integrity each time the system is towed.

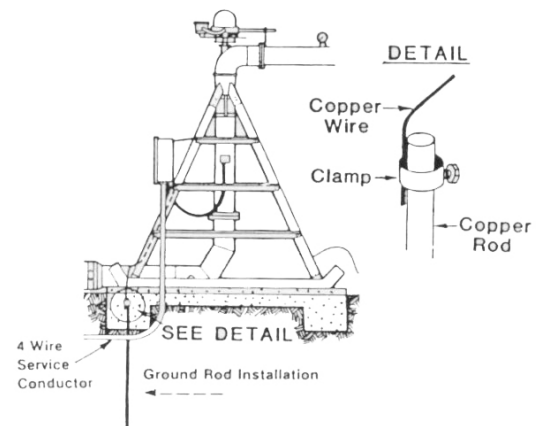

Lockout / Tagout

Refer to U.S. Occupational Safety & Health Administration (OSHA) Regulations (Standards - 29 CFR) Typical minimal lockout procedures - 1910.147 App A, or applicable national, state or local regulations, for additional information.

On the following pages, you will find the typical minimal lockout procedures, as according to U.S. Occupational Safety & Health Administration (OSHA) Regulations. This procedure is used whenever maintenance or servicing is done on machines or equipment. It shall be used to ensure that the machine or equipment is stopped, isolated from all potentially hazardous energy sources, and locked out before anyone performs any servicing or maintenance where the unexpected start-up of the machine or equipment, or release of stored energy, could cause injury. When the energy isolating devices are not lockable, tagout may be used. Below is the sequence of Lockout:

1. Notify all affected employees that servicing or maintenance is required on a machine, or equipment, and that the machine, or equipment, must be shut down and locked out to perform the servicing or maintenance.
2. The authorized employee shall refer to the company procedure to identify the type and magnitude of the energy that the machine or equipment utilizes, understand the hazards of the energy, and know the methods to control the energy.
3. If the machine, or equipment, is operating, shut it down by the normal stopping procedure.

4. De-activate the energy isolating device(s).
5. Lock out the energy isolating device(s) with assigned individual locks.
6. Stored or residual energy (such as that in capacitors, springs, elevated system members, rotating fly-wheels, hydraulic systems, air, gas, steam, water pressure, etc.) must be dissipated or restrained by methods such as grounding, repositioning, blocking, bleeding down, etc.
7. Ensure that the system, or equipment, is disconnected from the energy sources by first checking that no personnel are exposed, then verify the isolation of the system, or equipment, by operating the push button or other normal operating controls or by testing to make certain the system, or equipment, will not operate. CAUTION: Return operating controls to the neutral or OFF position after verifying the isolation of the equipment.
8. The system, or equipment, is now locked out.



Restoring Equipment to Service

When the servicing, or maintenance, is completed and the machine, or equipment, is ready to return to normal operating condition, the following steps shall be taken.

1. Check the machine, or equipment, and the immediate area around the machine to ensure that nonessential items have been removed and that the machine, or equipment, components are operationally intact.
2. Check the work area to ensure that all employees have been safely positioned or removed from the area.
3. Verify that the controls are in neutral.
4. Remove the lockout devices and reenergize the machine or equipment. Note: The removal of some forms of blocking may require reenergization of the machine before safe removal.
5. Notify affected employees that the servicing, or maintenance, is completed and the machine, or equipment, is ready for use.

“UNITED STATES DEPARTMENT OF LABOR.” Occupational Safety and Health Administration (1996). *Occupational Safety and Health Standards: General Environmental Controls*, (Standard No. 1910.147 App A). Retrieved from www.osha.gov/pls/oshaweb/owadisp.show_document?p_table=STANDARDS&p_id=9805.



Exercise caution when handling fuel near systems equipped with combustion engine-driven generators and pumps.



Keep away from the system during thunderstorms or other severe weather conditions. The system is grounded and is probably the highest object in the field, making it a good lightning receptor.

**Danger**

Be sure protective guards are installed on all belts and driveshafts of ancillary equipment such as combustion engines, electric motors, pumps, etc.

**Danger**

If you suspect a short circuit, or the system is not working correctly, DO NOT touch the system and keep others away from it. Call your Reinke service technician. Electrical component troubleshooting and replacement should be performed by a certified Reinke Service Technician to ensure built-in safety features remain intact. This also ensures the system remains compliant with the National Electric Code and Reinke Manufacturing Specifications.

**Danger**

Avoid any bodily contact with high pressure water streams from sprinklers and end guns.

**Caution**

Do not operate the system with water when temperatures are below 40°F (4.5°C). This can cause structural damage to the system. Damage from freeze-up is not covered under warranty.

**Warning**

Keep away from fields where the system is chemigating. Make sure the applied chemical and water does not blow or drift past the area of intended operation. A check valve must be installed between the pivot center and the pump to prevent the mixture of water and chemical from siphoning back into the irrigation water source. Comply with all local, state, and federal regulations.

**Caution**

Maintain adequate crop clearance. Allowing the systems trussing to drag in the crop, can cause structural damage to the system.

**Caution**

DO NOT oversize fuses. Fuses are sized for a specific circuit. It is very important to make sure you have the proper fuse size in place before initially starting the system and when replacing fuses.

 **Caution**

In most states, it is unlawful to spray water on state and county roadways. This is a serious hazard and must not be allowed.

 **Warning**

If your system is equipped with any auto-stop or auto-reverse mechanism, make sure they are working correctly and a tower barricade is properly installed. ***Reinke disclaims any and all liability (including any liability created pursuant to the Irrigation Systems Warranty) with regard to damage to the irrigation system, or to other property, or personal injury or death, caused by improper installation or maintenance of Reinke-supplied tower auto-reverse or auto-stop switches or tower barricades, or by use of customer-supplied barricades.***

 **Danger**

Drive shafts may start without warning. Keep away from drive shafts to prevent clothing or limbs from being entangled, resulting in severe injury.

 **Caution**

Safe operation of any mechanized irrigation system is the responsibility of the operator, regardless of utilizing either on-system or remote control.

This manual was developed based on the information that was available at the time it was written. Reinke reserves the right to update this information, at any time, without providing prior notice.

SAFETY LABELS

The following safety signs and decals can be found on your system as indicated below. Make sure that you can locate and identify each of these. If these labels become illegible at any time, contact your Reinke dealer to order replacements.

Standard Panel

Operating Instructions

⚠️ **Before starting System, each operator must read and understand all Reinke and supporting equipment owners manuals.**

1. Observe field and System conditions to be sure the System and System's path are clear of people and any other obstacles. See "System Safety" section at the beginning of appropriate Reinke System Owners Manual.
2. If you desire to run water with the System, ensure Electric Pump Control is enabled and safe to start as per Pump Manufacturer's recommendations. Then turn Pump Disconnect Switch to the "ON" position.
3. If your System utilizes an optional Generator Switch to control a Combustion Engine Driven Well or Generator, turn the Generator Switch to the "START" position. Ensure Engine is safe to start as per Engine Manufacturer's recommendations. Then start Engine as per Engine Manufacturer's recommendations.
4. Turn Main Disconnect Switch to the "ON" position.
5. Observe the voltage on the Main Control Panel Voltmeter. This meter should read 456-504 VAC, 60 HZ (380-420 VAC, 50 HZ). **In no event should the operational voltage read below 456 VAC or above 504 VAC.**
6. Ensure "Safety OK" Indicator Light is lit up. If it is not lit up, the Safety Circuit is open. See "Safety OK Indicator Light" in the "Main Control Panel Layout" section of appropriate Reinke System Owners Manual.
7. Turn System Power Switch to the "ON" position.
8. Turn Water Supply Switch to the "ON" position if you desire to run water with the System. Turn Water Supply Switch to the "OFF" position if you do not desire to run water with the System.
9. If your System is equipped with an optional Low Pressure Shut Down, turn the Pressure Override Switch to the "BYPASS" position.
10. If your System is equipped with the optional Auto-Stop Cam Plate Option, it may be necessary to turn the Park Override Switch to the "BYPASS" position until the System moves off the Auto-Stop Ramp. See "Cam Plate Switches" section in appropriate System Owners Manual.
11. If your System is equipped with the optional Low Temperature (Frost) Shutdown kit, turn the switch to the "BYPASS" position if you desire to move the System without pumping water through it at temperatures below 45°F. Turn the switch to the "AUTO" position for normal operation. This will ensure the System will shut down if the temperature falls below the temperature set on the Frost Control Board on the Back Plate of the Main Control Panel. **In no case should the System be operated with water in potential icing conditions.**
12. Set ATC Timer to desired speed. See Speed Chart in Main Control Panel or "Speed Chart" Section in appropriate Reinke System Owners Manual.
13. Turn Direction Switch to desired direction. "FORWARD" = Clockwise and "REVERSE" = Counterclockwise.
14. Push Start Button and hold for three (3) seconds or less. You should hear the magnetic Contactor engage (snap) and the System should start. If not, recheck this procedure to make sure you have followed it correctly. Release the button. If another snap is heard, a Malfunction is indicated. See "Start Button" in the "Main Control Panel Layout" section of appropriate Reinke System Owners Manual. **Do not hold the Start Button in for more than three (3) seconds as this will override the safety circuits.**
15. If your System is equipped with an optional Low Pressure Shut Down, turn the Pressure Override Switch to "AUTO."
16. If your System utilizes an optional Generator Switch to control a Combustion Engine Driven Well or Generator, turn the Generator Switch to "RUN."
17. If your System is interlinked with a Chemigation Pump or other auxiliary device, turn the Chemigation/Auxiliary Switch to "ON."
18. If your System is equipped with an optional End Gun, turn the End Gun Switch to "RUN" if you desire to operate the End Gun. Turn the switch to "STOP" if you do not desire to operate the End Gun.
19. If your System is equipped with the optional Auto-Stop Cam Plate Option, and you desire to park the System, set Auto-Stop Ramp to desired location and turn Park Override Switch to the "AUTO" position. See "Cam Plate Switches" section in appropriate System Owners Manual.

Reinke P/N 11884

Operating instructions and the operator's manual can be found on the inner door of the panel.

⚠️ DANGER / PELIGRO

480 VOLTS / 480 VOLTIOS


This machine may start automatically. Do not open panel or service machine until machine disconnect is in OFF position and locked.

Esta máquina puede arrancar automáticamente. No abrir el panel ó haga servicio hasta que el interruptor principal -en el panel- esté en posición de OFF.

Cette machine peut démarrer automatiquement. Ne pas ouvrir l'armoire de contrôle ou faire l'entretien de la machine avant que le bouton de déconnexion ne soit en position OFF et verrouillé.

IMPORTANT

START BUTTON OVERRIDES SAFETY CIRCUIT HOLDING BUTTON IN FOR MORE THAN 3 SECONDS COULD DAMAGE SYSTEM

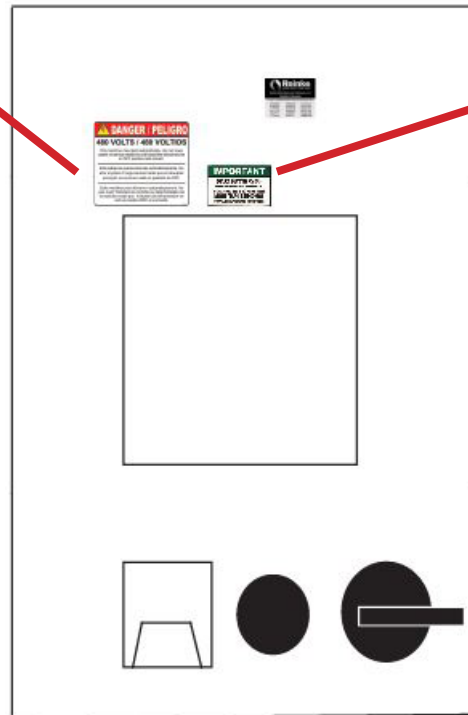


This caution label is found on the bottom of the panel.

⚠️


CAUTION

IRRIGATION MACHINES AND EQUIPMENT MUST HAVE FOUR WIRES FROM THE LOAD SIDE OF THE POWER SOURCE TO THIS DISCONNECT. (GENERATORS INCLUDED)
ARTICLE 675 AND 250-61 --- NATIONAL ELECTRICAL CODE

Tower Box

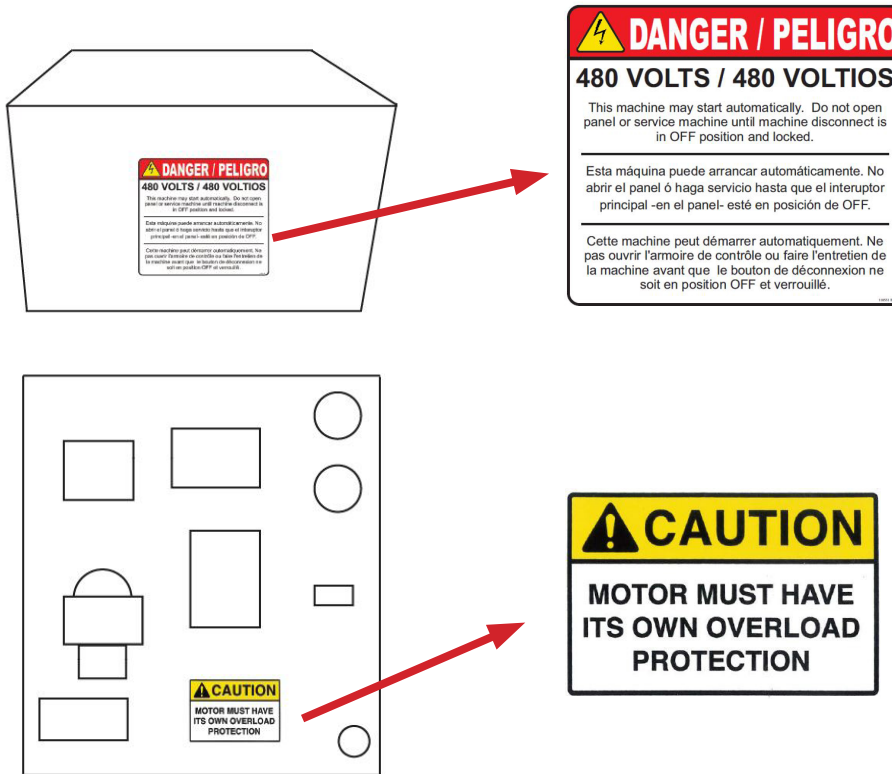


Tower Base

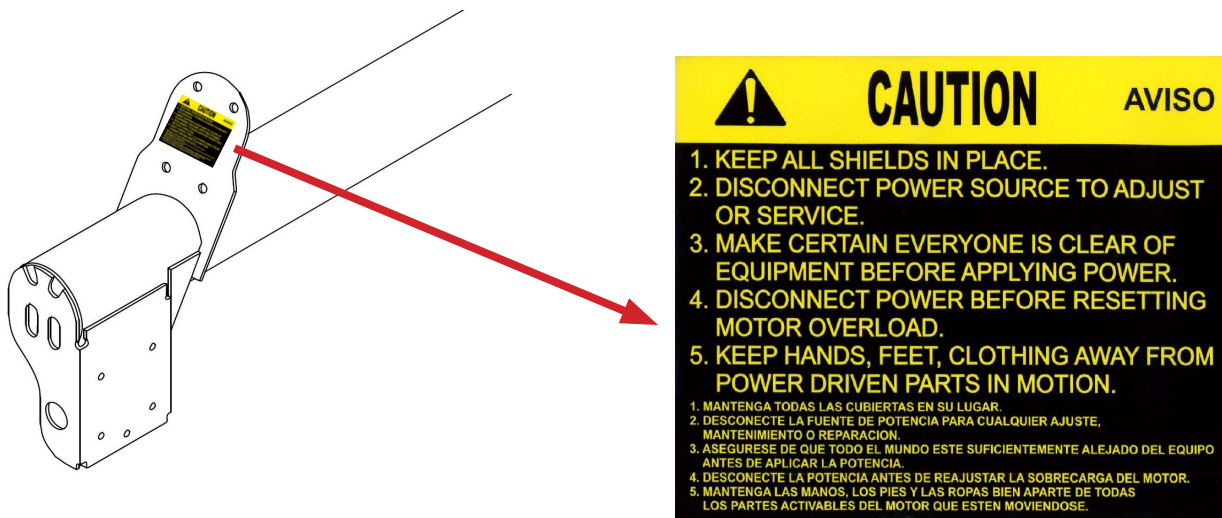

MAIN CONTROL PANEL LAYOUT

The Reinke Advanced Main Control Panel consists of a Reinke Precision Application Controller III (PAC III) as the main control module. Opening the panel cover door will reveal the controls detailed in the following pages of this manual. Controls will be described in this section starting with the System Power Switch and moving counter-clockwise.

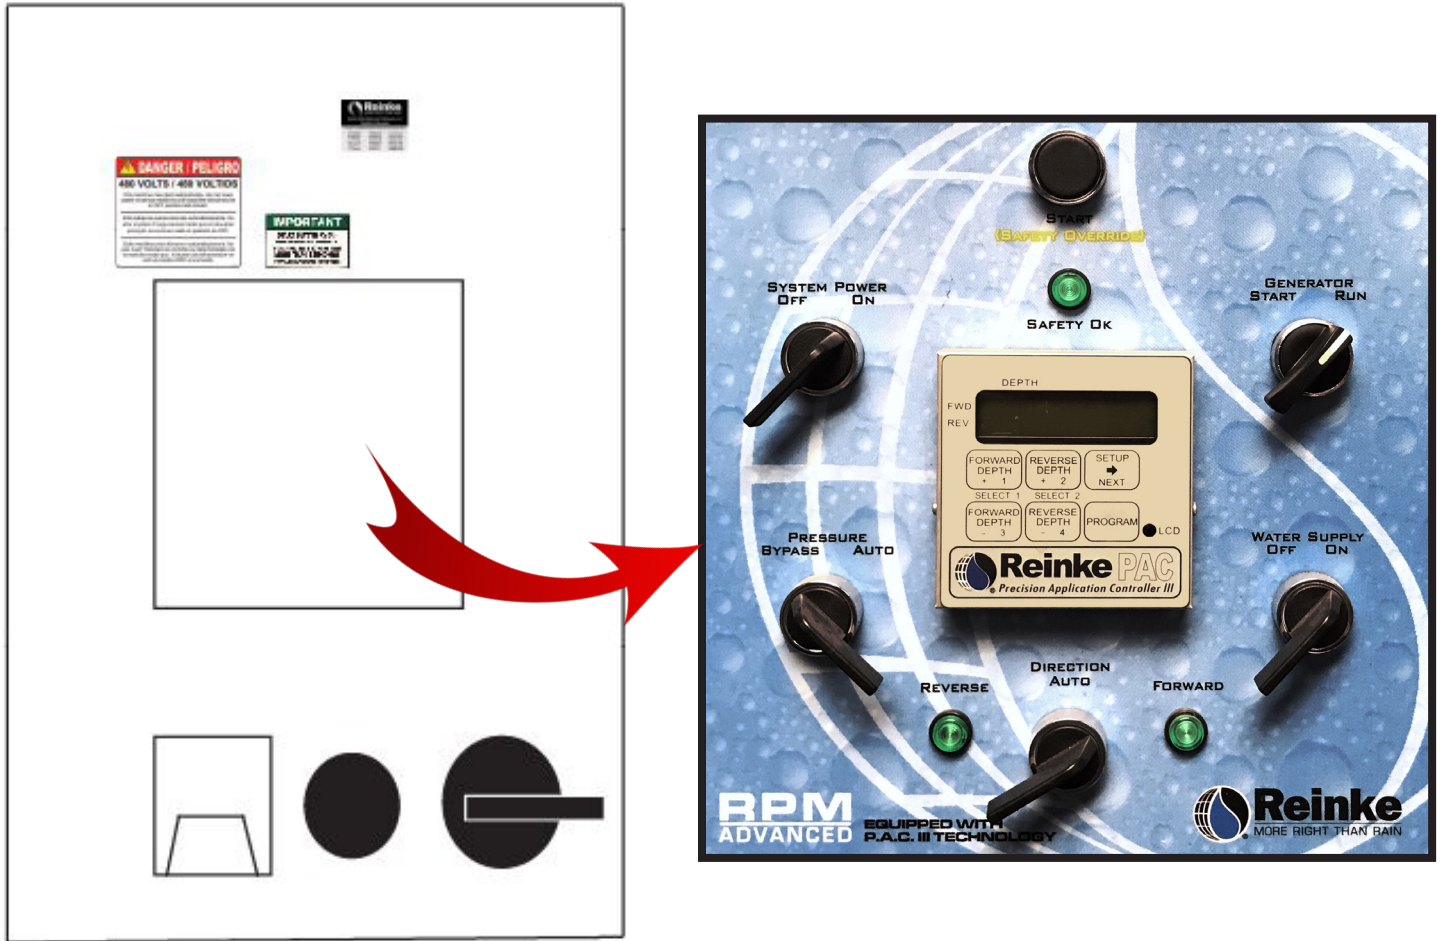

Main Disconnect Switch

The main disconnect switch controls the 480 or 240 VAC power supply to the system. The switch is mounted on the back plate of the main control panel and is interlocked with a disconnect handle on the main control panel inner door. The switch must be in the ON position for the system to operate. To open the inner panel door and view the inside of the control panel, place the disconnect switch in the OFF position. Do not turn the main disconnect switch to the ON position with the inner door open.



System Power Switch

The system power switch must be in the ON position for the system to operate in either direction. When the switch is in the OFF position, the system will not operate. Place the switch in the OFF position to shut down the system.

Water Supply Switch

The water supply switch breaks the well kill circuit and allows the system to operate without the pump on for commercial utility powered systems. When the switch is placed in the OFF position, the well kill circuit is open and the pump will not start when the system is started. When the switch is placed in the ON position, the well kill circuit is closed and the pump will start when the system is started. For generator systems, always leave the water supply switch ON.

Pressure Switch (Optional)

If your system is equipped with an optional low pressure shutdown, a two-position switch labeled BYPASS/AUTO will be included on the main control panel. In the BYPASS position, the pressure switch is bypassed. Use this position when you start the system or want to move the system without supplying water to it. In the AUTO position, the pressure switch is activated and the system will shut down if the pressure falls below the preset level. Be sure the switch is in the AUTO position after pressure has built in the system. This assures proper function of the switch during water application and normal operation.

Generator Switch (Optional)

If the system is equipped with an engine-driven generator or pump, the generator switch is used to bypass the engine shutdown during start up. The START position is used when starting the engine. Then the switch is turned to RUN after the system is running.


 **Caution** *If the generator switch is left in the START position, the engine shut-down is bypassed and the engine will not kill in the event the system stops.*

Direction Switch

This switch is used to select the systems direction of operation. To run the system clockwise, the switch must be placed in the FORWARD position before pressing the START button. To run the system counter-clockwise, the switch must be placed in the REVERSE position before pressing the START button. To change the systems direction, simply move the direction switch to the FORWARD or REVERSE position and press the START button. To enable auto-reverse (optional), place the direction switch in the AUTO position and press the START button. When in auto, the system will start in the direction it was last moving. Refer to the tower auto-reverse switch on pages 37-38 for more information.

Start Button (Safety Override)

After the direction switch has been placed in the FORWARD, REVERSE, or AUTO positions, start the system by pressing the start button. This activates the magnetic contactor in the main control panel. The contactor “latches” if all safety circuits indicate they are in a closed position. Listen for the contactor to engage when the start button is pressed. If, after the button is released, another “thump” is heard, the contactor did not stay engaged (latched) and the system will not continue to run. This indicates the safety circuit has an “open” or “no go” condition that needs correcting.

 **Warning** *DO NOT hold the start button in for more than three (3) seconds as this will override the safety circuits. Call your Reinke dealer or authorized service person for assistance.*

Safety OK Indicator Light

The Safety OK Indicator Light will illuminate when the safety circuit is complete and the system is running. If the safety circuit is open, the problem must be corrected before the system can safely start. One reason for a “no go” safety circuit could be a stuck tower that has caused misalignment. Call your Reinke dealer or authorized service person for assistance.

Voltmeter

This meter monitors the voltage between two incoming legs of the supplied power. This meter should read 456-504 VAC, 60 HZ (380-420 VAC, 50 HZ) on 480 VAC systems, or 230-250 VAC, 60 HZ on 240 VAC systems. At no time should the operational voltage read outside these parameters.



Hour Meter


This meter displays the number of hours the system has operated (excluding the pump) since it was new.



PRECISION APPLICATION CONTROLLER III (PAC III)

NORMAL OPERATION

The PAC display will be on unless the main disconnect switch in the main control panel is turned to the OFF position. The normal operation screen shown on the next page will be the default screen. From the normal operation screen, the forward (clockwise) or reverse (counter-clockwise) depth may be modified at any time while the system is running or stopped. The PAC unit uses four input keys to set the forward and reverse application depths. To adjust the depth in the forward and/or reverse direction(s), press the desired key as indicated by the drawing. The depth will change by 0.01” increments. The hours per revolution, or feet per hour, will adjust as the depth changes on the screen. The speed will be automatically calculated. Note: Increasing the depth applied decreases the end tower run time, which increases the hours per revolution for pivot systems, and reduces the feet per hour rate on lateral move systems. Also, be aware that other factors such as (but not limited to) wheel slippage, improper tire pressure, worn nozzles, or adverse field conditions can affect the amount of water that is applied.

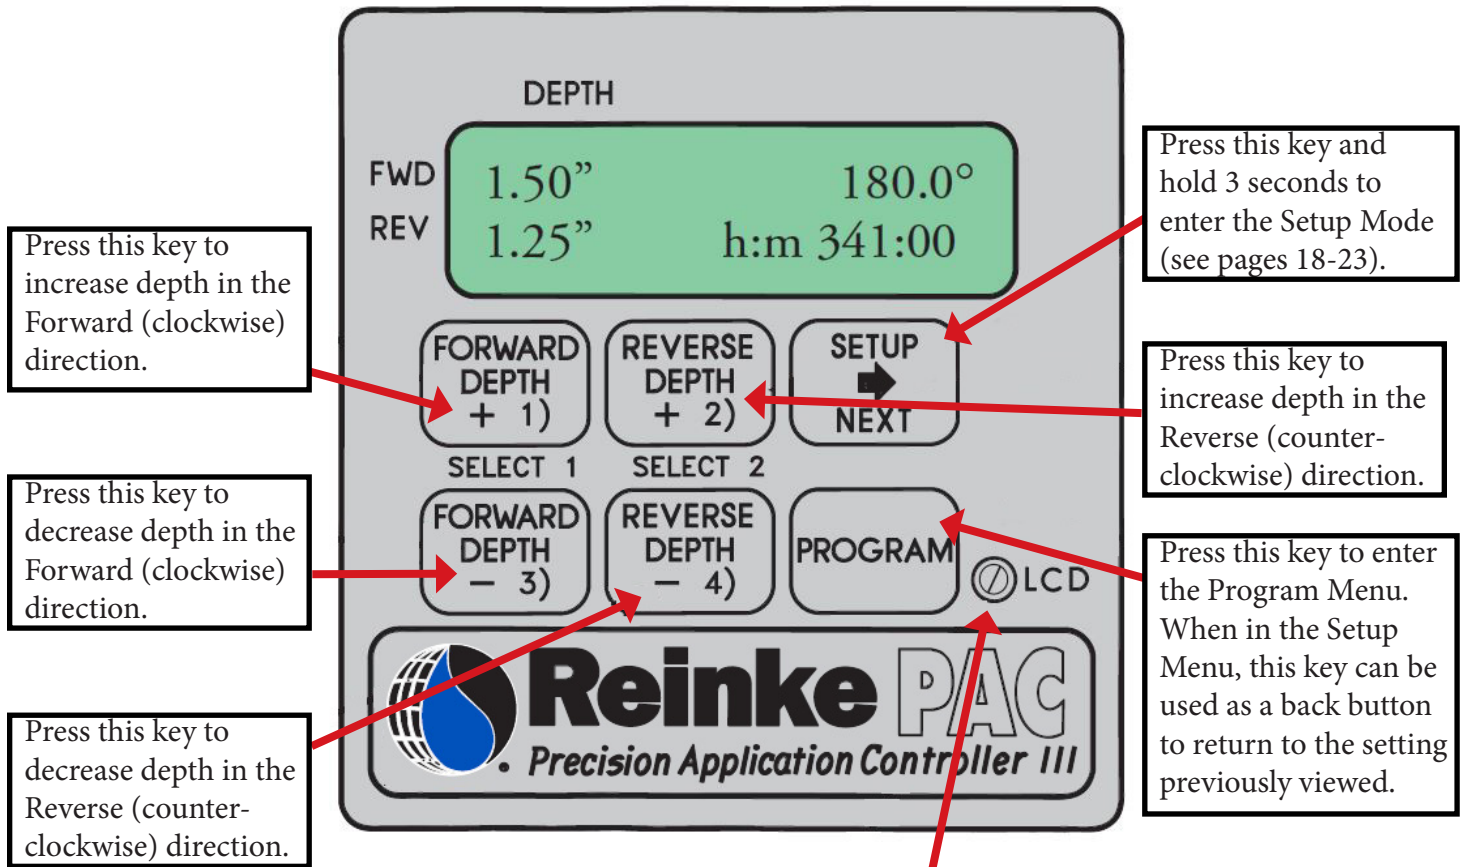

Hint: For rapid adjustments, press and hold the depth key. The display will rapidly scroll through the adjustment range.

The screen (LCD) can be adjusted to correct any viewing problems that may occur. The screw adjuster labeled LCD can be adjusted with a small screwdriver any time the PAC Timer is powered. Simply adjust the screw adjuster until the screen is most visible for your application. The height of the main control panel, and the angle it is sitting on the pivot center, will affect the view of the screen.

PAC III Display Detail

During normal operation, the screen will show various types of information. This section will describe in detail what is shown on the display in both pivot and linear modes. The display screen consists of two lines, with each line capable of displaying 16 characters. Characters are numbered below to indicate the position in the table of symbols shown below.

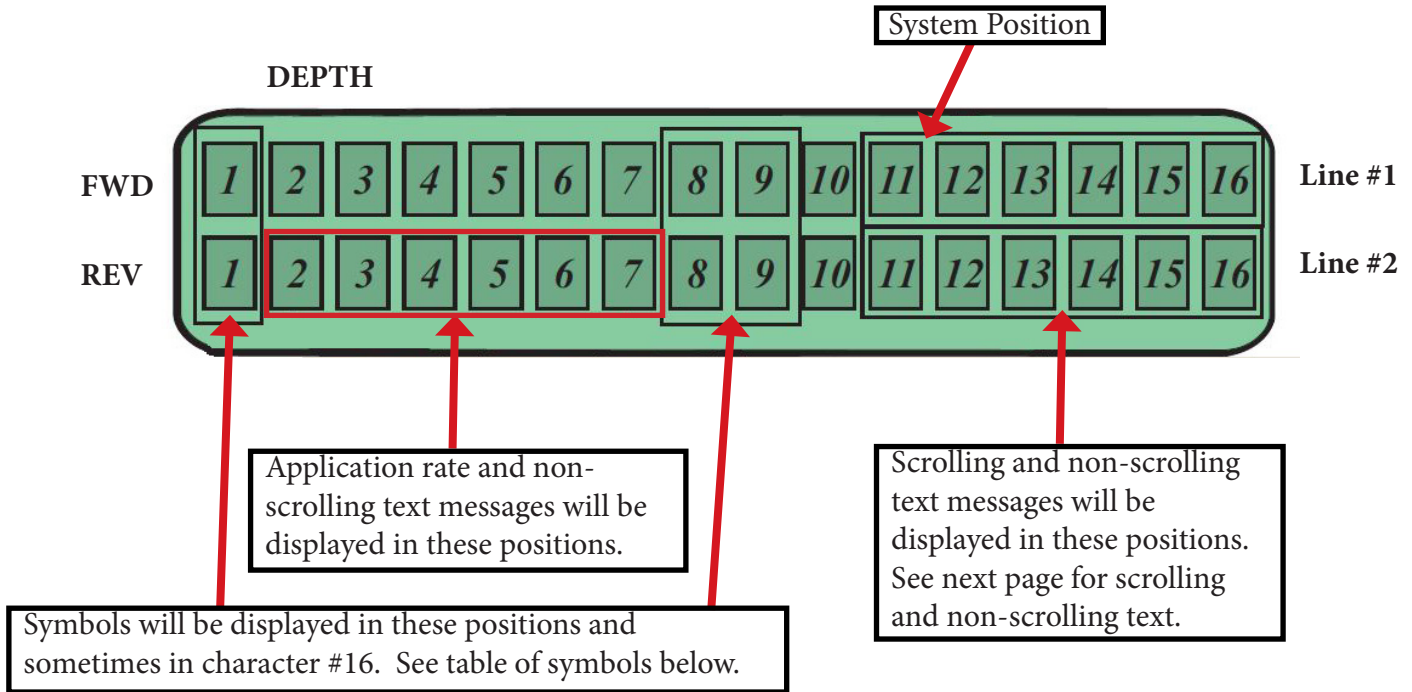


Table of Symbols


Symbol	Definition	Position
→	Indicates the system is running in the selected direction.	1 - Either Line
+	The end tower is moving in the selected direction.	1 - Either Line
>	Indicates the direction the system will move when started.	1 - Either Line
E ₁	Indicates the end gun #1 is ON.	8 - Top Line
A ₁	Indicates the auxiliary #1 is ON.	9 - Top Line
100%	Indicates the minimum depth has been set and the system is moving at 100%.	1 - Either Line
OFF	Indicates the maximum depth has been set and the system will not move.	1 - Either Line
⌚	Indicates the system is waiting (1 to 15 minutes) after an automatic direction change has occurred. The number will count down as time expires and the hourglass will flash. "dly ??/??" will be displayed in characters #12-#16. The first numbers indicate the time elapsed while the second set of numbers indicates the time to elapse before the system will restart.	1 - Either Line 12-16 Bottom Line
a	Indicates the system is within an "active" programmed sector that is turned ON.	1 - Either Line
flashing ^o	Indicates the PAC III module is sending and receiving data from a communication device.	16 - Top Line
X	Indicates the PAC III module has lost the resolver signal.	16 - Top Line
0	Indicates improper PAC setup.	1 - Either Line

Scrolling and Non-Scrolling Text Messages

Scrolling and non-scrolling text messages will appear in the lower right section of the display screen. Non-scrolling text messages will also appear in the lower left section of the display screen in some situations. The screens below illustrate the possible scrolling and non-scrolling text messages. The displayed message will vary depending on the options running at that time.




The scrolling "h:m 100:00" is the amount of time in hours and minutes it will take the system to make a complete revolution at the depth specified (*center pivot systems only*).

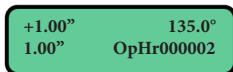


The scrolling "OpHr000002" is the operating hours, or the amount of time in hours, the system has been moving.



The scrolling "FROST SHUT" means the system has shut down because the temperature is below the current "FROST STOP" setting from the setup menu (*systems with temperature probe only*).

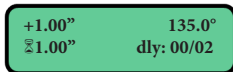

The non-scrolling "dly 00/02" indicates the system is waiting two minutes after a direction change. The "0" indicates zero minutes have elapsed of the two minutes. The flashing  indicates which direction the system will move next.



The scrolling "015%" is the percent of time the last tower is moving.




The scrolling "PRK 040.0" indicates the park program has been turned ON and set to shut down at 40.0°.



The scrolling "FROST OVRD" indicates the system was shut down because the temperature was below the current "FROST STOP" setting from the setup menu. Pressing the start button will allow the system to move "dry" without the pump ON. The pump will start once the temperature is above the current "FROST STOP" setting from the setup menu (*systems with temperature probe only*).



The non-scrolling "LOW VOLT" indicates low voltage has caused the voltage percent indicator to fall below the voltage percent safety indicator entered in the setup menu.

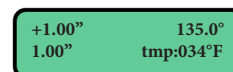


The scrolling "tmp:034°F" is the current temperature (*systems with temperature probe only*).



The scrolling "sats: 10w" indicates the number of GPS satellites the PAC III is receiving signal from. The "w" indicates the PAC III is receiving the WAAS signal for differential correction (*systems with GPS only*).



The non-scrolling "SEC1" indicates sector program #1 is turned ON.

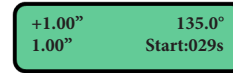


The non-scrolling "Start:029s" indicates low voltage has caused the voltage percent indicator to fall below the voltage percent safety indicator entered in the setup menu and the system shut down. The voltage has since came up and the system is counting down before it restarts.

Logs

The PAC III timer has a unique feature that logs the last ten events. Press the "Setup/Next" key and hold for three seconds from the normal operation screen to advance to the "SETUPBUILD2K" screen shown to the right.



Each log screen has the operating hour and position (degree) readings where and when the event occurred. Press the "Reverse Depth +2" key to view the first of ten log screens.

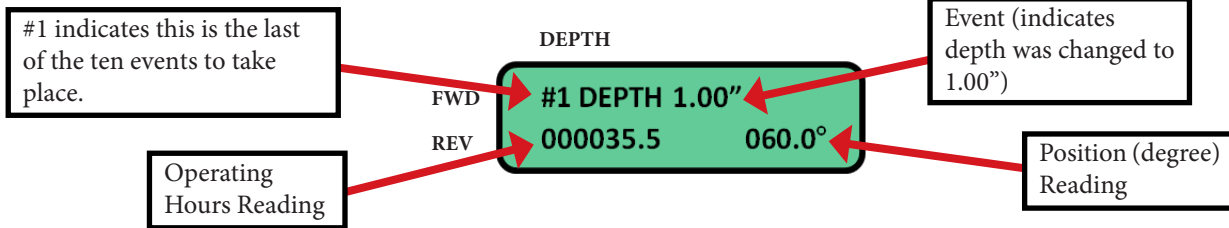


The other possible log screens that may be displayed are illustrated below and on the next page in random order for explanatory purposes. Press the "Setup/Next" key to view the next log screen.



The "POWER UP" log screen indicates the main disconnect switch was turned ON at the displayed operating hour and position (degree) readings.



The "SYS START" log screen indicates the system was started at the displayed operating hour and position (degree) readings.

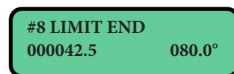

The "LIMIT END" log screen indicates the system safety circuit was closed at the displayed operating hour and position (degree) readings.



The "LOW VOLT BEG" log screen displays the operating hour and position (degree) reading where low voltage has caused the voltage percent indicator to fall below the voltage percent safety indicator entered in the setup menu.




The "SYS STOP" log screen indicates the system was stopped at the displayed operating hour and position (degree) readings.




The "PARK STOP" log screen indicates the system was programmed to stop and it stopped at the displayed operating hour and position (degree) readings.



The "LOW VOLT END" log screen displays the operating hour and position (degree) reading where the voltage has caused the voltage percent indicator to rise above the voltage percent safety indicator entered in the setup menu.

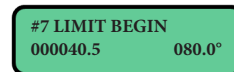

The "LIMIT BEGIN" log screen indicates the system safety circuit was opened at the displayed operating hour and position (degree) readings.

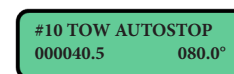

The "TOW AUTOSTOP" log screen indicates the tower auto-stop mechanism has contacted the tower barricade at the displayed operating hour and position (degree) readings.

#1 TOW AUTOREV
000042.5 080.0°

The "TOW AUTOREV" log screen indicates the tower auto-reverse mechanism has contacted the tower barricade at the displayed operating hour and position (degree) readings. *Remember, the auto-reverse option must be enabled for the system to start with the direction switch placed in the "AUTO" position.*

#4 FORWARD DIR
000042.5 080.0°

The "FORWARD DIR" log screen indicates the system direction was switched to forward at the displayed operating hour and position (degree) readings.

#6 END GUN 1 ON
000036.5 070.0°

The "END GUN 1 ON" log screen displays the operating hour and position (degree) readings where the system reached a position (degree) setting in the end gun #1 program where end gun #1 was programmed to turn ON.

#9 END GUN 2 OFF
000036.5 070.0°

The "END GUN 2 OFF" log screen displays the operating hour and position (degree) readings where the system reached a position (degree) setting in the end gun #2 program where end gun #2 was programmed to turn OFF.

#2 PIV AUTOSTOP
000045.5 080.0°

The "PIV AUTOSTOP" log screen indicates the system reached the barrier setting from the setup menu. The system didn't auto-reverse because the direction switch was not in the "AUTO" position. Instead, it stopped at the displayed operating hour and position (degree) readings.

#5 REVERSE DIR
000045.5 080.0°

The "REVERSE DIR" log screen indicates the system direction was switched to reverse at the displayed operating hour and position (degree) readings.

#7 END GUN 1 OFF
000036.5 070.0°

The "END GUN 1 OFF" log screen displays the operating hour and position (degree) readings where the system reached a position (degree) setting in the end gun #1 program where end gun #1 was programmed to turn OFF.

#10 REM START
000036.5 070.0°

The "REMSTART" log screen displays the operating hour and position (degree) readings where the system was started by a remote device such as a Reinke Phone Link or remote control and monitoring software.

#3 PIV AUTOREV
000040.5 080.0°

The "PIV AUTOREV" log screen indicates the system reached the barrier setting from the setup menu. The system auto-reversed at the displayed operating hour and position (degree) readings because the direction switch was in the "AUTO" position. *Remember, the auto-reverse option must be enabled for the system to start with the direction switch placed in the "AUTO" position.*

#8 END GUN 2 ON
000036.5 070.0°

The "END GUN 2 ON" log screen displays the operating hour and position (degree) readings where the system reached a position (degree) setting in the end gun #2 program where end gun #2 was programmed to turn ON.

#1 REM STOP
000036.5 070.0°

The "REM STOP" log screen displays the operating hour and position (degree) readings where the system was stopped by a remote device such as a Reinke Phone Link or remote control and monitoring software.


#2 PRESSURE SHUT
000036.5 070.0°

The "PRESSURE SHUT" log screen displays the operating hour and position (degree) readings where the system shut down due to low pressure.

PRECISION APPLICATION CONTROLLER III (PAC III) SETUP

The PAC Timer must be properly setup to ensure accurate depth of application. Press and hold the “Setup/Next” key for three seconds to enter the setup menu. The screen shown below will be displayed. If any of the setup screens are left idle for more than two minutes, the PAC will return to the normal operation screen without saving any changes. Press and hold the “Setup/Next” key for three seconds to enter the setup menu and to move through the setup screens. The “Forward Depth” key toggles through the setup menu options. The “Program” key can be used as a back button when in the setup menu. Use the number keys to change numeric values.

Caution Do not change the setup options while the system is moving, or undesirable operation will occur.

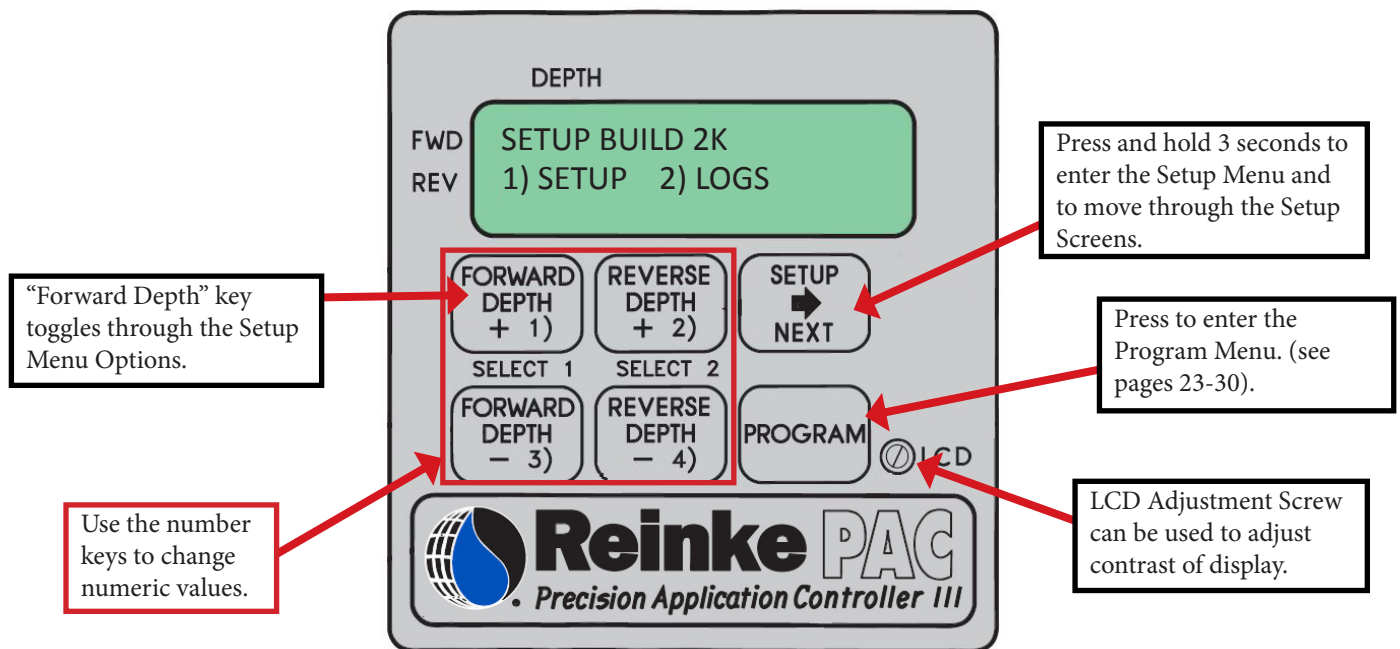

Board Type

Press the “Forward Depth +1” key to advance to the Board Type screen shown. Press the “Forward Depth +1” key to choose between RPMADV, PACII, or NONE. This option tells the PAC Timer which board is installed.



System Type

Press the “Setup Next” key to advance to the System Type screen shown. Press the “Forward Depth +1” key to choose between PIV for pivots and LIN for linear move machines.




Units

Now press the "Setup/Next" key to advance to the units screen shown below. Press the "Forward Depth + 1" key to choose between "English" and "Metric" units.



Minimum Depth

Now press the "Setup/Next" key to advance to the minimum depth screen as shown below. Press either the "Forward Depth + 1" key to increase or the "Forward Depth - 1" key to decrease the minimum depth by 0.01" increments for "English" units or 0.1 mm increments for "Metric" units. This value is provided on the speed chart located in the main control panel. Use the depth @100% for center pivot systems and depth @90% for linear move systems. If using "Metric" units, round to the nearest tenth (0.1) of a millimeter.

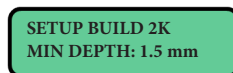


Metric Units



English Units


Cycle Time

Now press the "Setup/Next" key to advance to the cycle time screen. Press the "Forward Depth + 1" key to choose the desired cycle time among "030S" for thirty seconds or "060S" for sixty seconds. This is the percent timer cycle time that determines how long the end tower will move and stop. See the end tower movement section later in this chapter for calculations on how the base cycle time is utilized. Most center pivots and linear move systems will utilize a sixty second cycle.

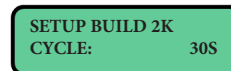


Hours Per Revolution


Now press the "Setup/Next" key to advance to the hours per revolution screen for center pivot systems, feet per hour screen for linear move systems with English units, or the meters per hour screen for linear move systems with metric units. Press either the "Forward Depth + 1" key to increase or the "Forward Depth - 3" key to decrease the hours per revolution setting by one hour increments for pivots or to increase or decrease the feet per hour setting by one foot or one meter increments for linear move systems. Press either the "Reverse Depth + 2" key to increase or the "Reverse Depth - 4" key to decrease the minute setting by one minute increments for center pivot systems or to increase or decrease the feet per hour setting by 0.01 foot or meter increments for linear move systems. This value is provided on the speed chart inside the main control panel.

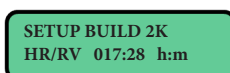

Center Pivot Systems

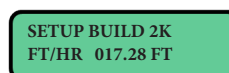

Linear Move Systems
with English Units

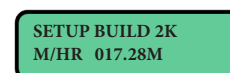

Linear Move Systems
with Metric Units

Position Input

Now press the "Setup/Next" key to advance to the position input screen. Press the "Forward Depth + 1" key to choose from "DED" for dead reckoning, "RSV" for the collector reel resolver option, or "GPS" for the Reinke navigator GPS end tower position option. **Linear move systems must be set to "GPS" only.**

- **DED (Dead Reckoning):** The location of the system is estimated using the known max speed and percent timer settings. This relies on the hours per revolution value of the system. If "DED" is selected, press the "Setup/Next" key to advance to the current position screen and input the current position data. Press either the "Forward Depth + 1" key to increase or the "Forward Depth - 3" key to decrease the current position setting by ten degree increments. Press either the "Reverse Depth + 2" key to increase or the "Reverse Depth - 4" key to decrease the current position setting by 0.1 degree increments.
- **RSV (Collector Ring Resolver Option):** The location of the system is derived from the resolver (a position reading device) that is connected to the collector ring. During installation of the system, the dealer or set-up crew will have to ensure that the resolver is set correctly in relation to the rest of the system.
- **GPS (Reinke Navigator End Tower GPS Position Option):** A navigational system using satellite signals to fix the location of a receiver on or above the earth's surface. The location of the system is determined by the GPS (Global Positioning System) receiver on the end tower. Due North is always zero degrees.
- **NONE:** Use none when no position information is desired.

SETUP BUILD 2K
POSITION IN: DED

SETUP BUILD 2K
CURR POS: 020.5°

SETUP BUILD 2K
POSITION IN: RSV

SETUP BUILD 2K
POSITION IN: GPS

SETUP BUILD 2K
POSITION IN: NONE

Auto Restart

Now press the "Setup/Next" key to advance to the auto restart screen. Press the "Forward Depth + 1" key to choose between ON or OFF as shown. If ON is selected, press the "Setup/Next" key to advance to the power delay screen. The power delay is the amount of time the system will delay once power is restored to the system. Press either the "Forward Depth + 1" key to increase or the "Forward Depth - 3" key to decrease the power delay time setting by one second increments. The power delay can be set from five seconds to six-hundred seconds.

SETUP BUILD 2K
AUTO RESTART: OFF

SETUP BUILD 2K
AUTO RESTART: ON

SETUP BUILD 2K
POW DELAY: 005s

Voltage Sensitivity

Now press the "Setup/Next" key to advance to the voltage sensitivity screen shown here. The number on the left is a voltage percent indicator that is unique to every system. The number on the right is the voltage percent safety indicator, or the value where the system will shut down. If the system voltage drops, the voltage percent indicator will drop. Press either the "Forward Depth + 1" key to increase or the "Forward Depth - 3" key to decrease the voltage percent safety indicator. This value should be twenty points below the voltage percent indicator for commercial utility powered systems and thirty points below the voltage percent indicator for generator systems. When VSENS is set to 100%, the voltage percent indicator is disabled.

SETUP BUILD 1
068% VSENS:048%

Pressure Switch

Now press the "Setup/Next" key to advance to the pressure switch screen. Press the "Forward Depth + 1" key to choose between YES if your system is equipped with a pressure switch or NO if your system is not equipped with a pressure switch. If YES is selected, press the "Setup/Next" key to advance to the pressure override screen shown here, on the bottom. Press either the "Forward Depth + 1" key to increase or "Forward Depth - 3" key to decrease the pressure override time setting by one minute increments. This is the amount of time needed to override the pressure switch as the system is building pressure. The pressure override time setting can be set from one minute to thirty minutes.


SETUP BUILD 2K
PRESS SWITCH: NO

SETUP BUILD 2K
PRESS SWITCH: YES

SETUP BUILD 2K
PRESS. OV: 10 MN

Frost Sensor

Now press the “Setup/Next” key to advance to the frost sensor screen. Press the “Forward Depth + 1” key to choose between YES if your system is equipped with a frost sensor (temperature probe) or NO if your system is not equipped with a frost sensor (temperature probe). If YES is selected, press the “Setup/Next” key to advance to the frost stop screen shown. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the frost stop setting by one degree increments. This is the temperature which the system will shut down. The frost stop setting can be set from 32 degrees Fahrenheit to 50 degrees Fahrenheit (English units) and from 0 degrees Celsius to 12 degrees Celsius (metric units).

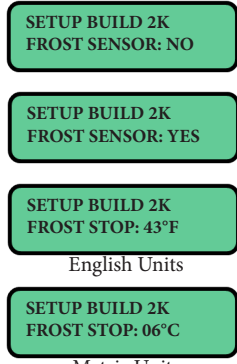

Warning *Setting the frost stop below 43 degrees Fahrenheit may result in damage to the system!*


Frost Restart

Now press the “Setup/Next” key to advance to the frost restart screen. Press the “Forward/Next” key to choose between YES if you would like the frost restart option enabled or NO if you would like the frost restart option disabled. If YES is selected, press the “Setup/Next” key to advance to the frost restart @ screen. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the frost restart @ setting by one degree increments. This is the temperature which the PAC will allow the system to restart. The frost restart @ setting can be set from 44 degrees Fahrenheit to 50 degrees Fahrenheit (English units) and from 7 degrees Celsius to 12 degrees Celsius (metric units).




Auto Reverse

Now press the “Setup/Next” key to advance to the auto reverse screen. Press the “Forward Depth + 1” key to choose between YES if you would like the auto-reverse option enabled or NO if you would like the auto-reverse option disabled. The auto-reverse option must be enabled for the system to start with the direction switch placed in the “Auto” position. If YES is selected, press the “Setup/Next” key to advance to the auto reverse forward barricade screen. This is the location relative to 0 degrees where the system must stop and auto-reverse when running in the clockwise direction. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the auto-reverse forward barricade setting by 10 degree increments. Press the “Reverse Depth + 2” key to increase or the “Reverse Depth – 4” key to decrease the auto-reverse forward barricade setting by 0.1 degree increments. Now press the “Setup/Next” key to advance to the auto reverse-reverse barricade. This is the location relative to 0 degrees where the system must stop and auto-reverse when running in the counter-clockwise direction. Press either the “Forward Depth + 1” to increase or the “Forward Depth – 3” key to decrease the auto-reverse reverse barricade setting by 10 degree increments. Press either the “Reverse Depth + 2” key to increase or the “Reverse Depth – 4” key to decrease the auto-reverse reverse barricade setting by 0.1 degree increments.

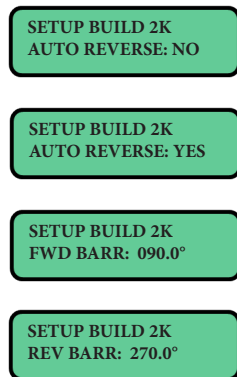

Example: Part-Circle System:

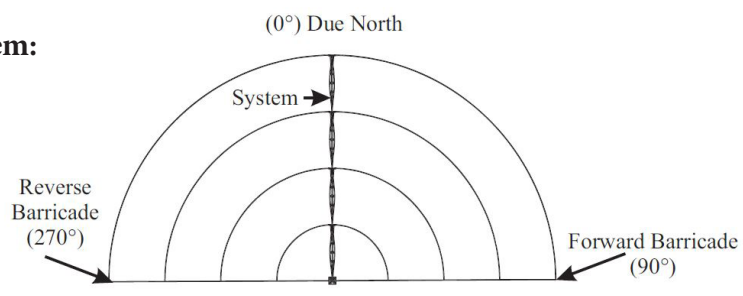

Stop Delay

Now press the "Setup/Next" key to advance to the stop delay screen. Press the "Forward Depth + 1" key to choose from NONE, AUTO, and FIXED. The stop delay function is used on part-circle systems. When FIXED stop delay is selected, the pivot will delay (not move) a set amount of time up to sixty minutes. This time is selected for both forward and reverse directions. When the AUTO stop delay is selected, the system will delay (not move) a set amount of minutes before moving in the opposite direction. This soaks the ends of the field on part-circle systems. The number of minutes the PAC delays is dependent upon the amount of water the time was applying before the switch was tripped. At a depth of 0.25", the system will delay approximately four minutes. At a depth of 0.50", the system will delay approximately eight minutes. At a depth of 0.75", the system will delay approximately twelve minutes. Any depth above 1.00" will delay fifteen minutes maximum.

SETUP BUILD 2K
STOP DELAY NONE

SETUP BUILD 2K
STOP DELAY AUTO

SETUP BUILD 2K
STOP DELAY FIXED

Reinke disclaims any and all liability (including any liability created pursuant to the Irrigation Systems Warranty) with regard to damage to the Irrigation System, or to other property, or personal injury or death, caused by improper installation or maintenance of Reinke-supplied Auto-Reverse or Auto-Stop Switches or Tower Barricades, or by use of customer-supplied Barricades.

Auto Stop Delay

If AUTO is selected, press the "Setup/Next" key to advance to the delay at screen. Press the "Forward Depth + 1" key to choose from BOTH, FWD, or REV. When the DELAY AT BOTH is selected, the system will delay in both the forward and reverse directions when switching to the opposite direction. When the DELAY AT FWD is selected, the system will only delay in the forward direction when switching to the reverse direction. When the DELAY AT REV is selected, the system will only delay in the reverse direction when switching to the forward direction.

SETUP BUILD 2K
DELAY AT: BOTH

SETUP BUILD 2K
DELAY AT: FWD

SETUP BUILD 2K
DELAY AT: REV

Fixed Stop Delay

If FIXED is selected, press the "Select/Next" key to advance to the forward delay screen. Press either the "Forward Depth + 1" key or the "Forward Depth - 3" key to select the forward delay time in one minute increments up to sixty minutes. Now press the "Select/Next" key to advance to the reverse delay screen. Press either the "Forward Depth + 1" or the "Forward Depth - 3" key to select the reverse delay time in one minute increments up to sixty minutes.

SETUP BUILD 2K
FWD DELAY: 01MN

SETUP BUILD 2K
REV DELAY: 01MN

Remote Communication

Now press the "Setup/Next" key to advance to the remote communication screen. Press the "Forward Depth + 1" key to choose between YES if the system is equipped with an optional Reinke phone link or controlled by Reinke remote control monitoring base station software, or NO if the system is not equipped with an optional Reinke phone link or controlled by Reinke remote control monitoring base station software. Now press the "Setup/Next" key to advance to the remote ID screen. Press either the "Forward Depth + 1" or the "Forward Depth - 3" key to set the remote ID to "01" if the system is equipped with an optional Reinke phone link. If the system is controlled by Reinke remote control monitoring base station software, the remote ID must coincide with the remote ID assigned to that particular system in the remote control monitoring base station software. Now press the "Setup/Next" key to advance to the enter year screen. Press either the "Forward Depth + 1" or the "Forward Depth - 3" key to set the last two digits of the current year. This gives the data a year so it is compatible with the Reinke remote control monitoring base station software.

SETUP BUILD 2K
REMOTE COMM.: YES

SETUP BUILD 2K
REMOTE COMM.: NO

SETUP BUILD 2K
REMOTE ID: 01

SETUP BUILD 2K
ENTER YEAR: 05

Start Pulse

Now press the "Setup/Next" key to advance to the start pulse screen shown here. This is the amount of time that a start command is supplied to the main control panel to power up the system during an auto-reverse or auto-restart. Press either the "Forward Depth + 1" key to increase or the "Forward Depth - 3" key to decrease the start pulse by one second increments. The start pulse can be set from two seconds to ten seconds. For center pivot systems, swing arm corner systems, or linear systems, set the start pulse to "02" seconds. For accu-corner systems, set start pulse settings to "06" seconds. If you're unsure of your system's start pulse setting, contact your local Reinke dealer for assistance.

SETUP BUILD 2K
START PULSE: 02S

2 seconds - Pivot
2 seconds - Swing Arm Corner
2 seconds - Linear
6 seconds - Accu-Corner

Caution Use caution when setting this parameter, as the start pulse overrides the system safety for the pulse duration.

Hose Trips for Lateral Move Systems w/ Canal Feed Only

Now press the "Forward Depth + 1" key to change from NO to YES if hose trips are desired. Hose trips are designed to shut down the linear system every time it reaches the limit set. If YES, then press the "Setup/Next" key. This will allow you to enter the distance (using the key numbers) the system should travel before it shuts down for a hose re-adjustment. Check what units the system is set to, either English or Metric.

SETUP BUILD 2K
HOSE TRIPS?: NO

SETUP BUILD 2K
HOSE TRIPS?: YES

SETUP BUILD 2K
HOSE TRIP: xxx'

Save Setup Changes


Now press the "Setup/Next" key to advance to the writing all data to memory screen as shown. This means the PAC III setup menu is complete and the data entered is being written to the PAC III memory chip. You can abandon setup changes without saving. To do this at any point in the setup menu, wait two minutes and the timer will leave the setup menu without saving the changes.

WRITING ALL DATA
TO MEMORY.....

PRECISION APPLICATION CONTROLLER III (PAC III) PROGRAMMING

This section will guide the operator how to program the PAC III. The PAC III can be programmed to control the following:


- 1 End Gun and 1 Auxiliary Program
- 2 Sector Programs with 10 Sectors per program
- 1 Park Position
- Reset Command

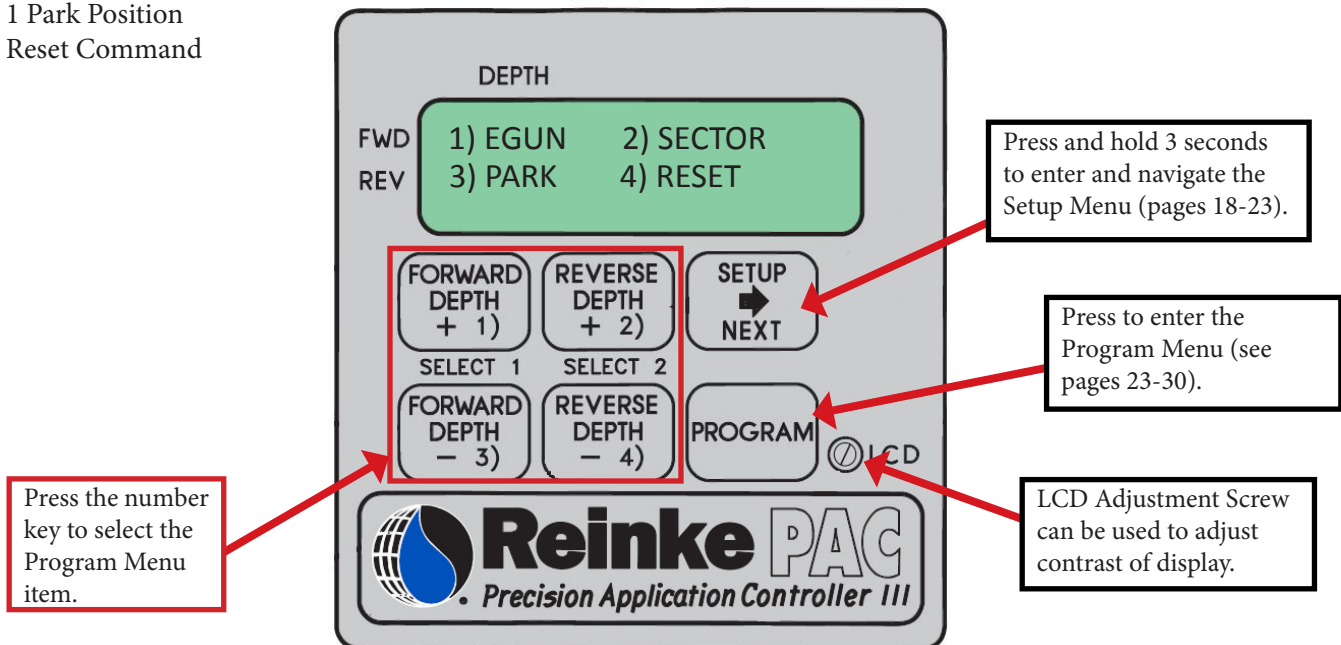

End Gun / Auxiliary Programming


Press the “Program” key to advance to the main program screen shown here. Now press the “Forward Depth + 1” key to advance to the end gun status screen. At the end gun status screen, the operator can either configure or override the end gun/auxiliary programs. Press the “Forward Depth + 1” key to configure end gun #1 program or press the “Forward Depth - 3” key to configure auxiliary #1 program. Once all the end gun/auxiliary programming steps are completed, the program will run. To manually control end gun #1, press the “Reverse Depth + 2” key to toggle the end gun #1 on/off. To manually control AUX1, press the “Reverse Depth - 4” key to toggle auxiliary #1 on/off. The altered end gun/auxiliary program will remain in the override status until the system reaches a position in the program where it changes status. Remember, it is against the law in most states to spray water on federal, state, and county roadways.

1)EGUN 2)SECTOR
3)PARK 4)RESET

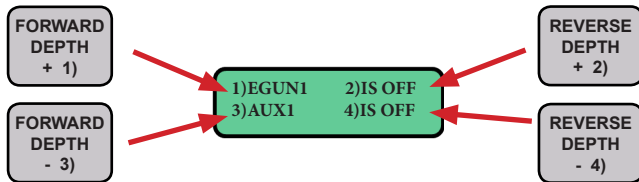

In the example below, assume end gun #1 needs to be programmed as shown. Always configure end gun/auxiliary programs with a clockwise rotation from 0 degrees. Sequences should also be numbered in consecutive order in a clockwise rotation from 0 degrees. Press the “Forward Depth + 1” key to configure end gun #1 program and advance to the end gun #1 program – number of sequences screen. This is the number of areas the end gun will be ON. Press either the “Forward Depth + 1” or the “Forward Depth - 3” key to set the number of sequences. For the example shown here, the end gun would be on four different sequences.

EGUN #1 PROGRAM
NUMBER OF SEQ: 4

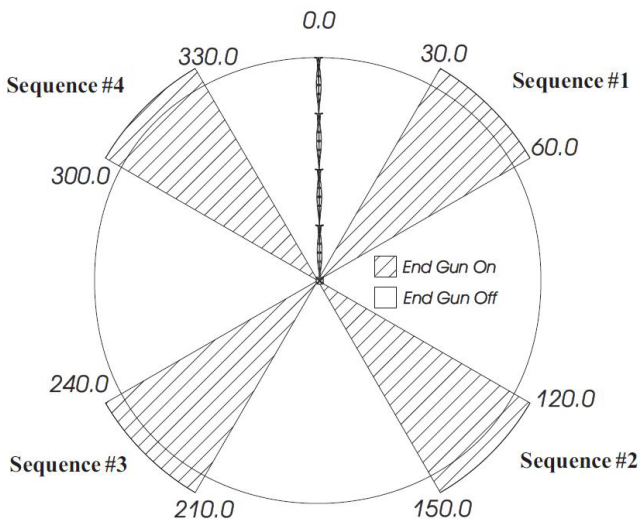

Note: Always configure End Gun/Auxiliary Programs with a clockwise rotation from 0°. Sequences should also be numbered in consecutive order in a clockwise rotation from 0°. See setup instructions on page 19 to identify 0° on your system.

Now press the “Setup/Next” key to advance to the end gun #1 program – sequence #1 – beginning degree screen. This is the position, or degree setting, of the first sequence where the end gun needs to turn ON. Press either the “Forward Depth + 1” key to increase or the “Forward Depth - 3” key to decrease this setting by 10 degree increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth - 4” key to decrease this setting by 0.1 degree increments. For the example shown above, the end gun #1 program – sequence #1 – beginning degree setting would be 30 degrees.

EGUN #1 PROGRAM
SEQ01 BEG: 030.0°

Now press the “Setup/Next” key to advance to the end gun #1 program – sequence #1 – end degree screen. This is the position, or degree setting, of the first sequence where the end gun needs to turn OFF. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10 degree increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1 degree increments. For the example shown on the previous page, the end gun #1 program – sequence #1 – end degree setting would be 60 degrees.

EGUN #1 PROGRAM
SEQ01 END: 060.0°

Now press the “Setup/Next” key to advance to the end gun #1 program – sequence #2 – beginning degree screen. This is the position, or degree setting, of the second sequence where the end gun needs to turn ON. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10 degree increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1 degree increments. For the example shown on the previous page, the end gun #1 program – sequence #2 – beginning degree setting would be 120 degrees.

EGUN #1 PROGRAM
SEQ02 BEG: 120.0°

Now press the “Setup/Next” key to advance to the end gun #1 program – sequence #2 – end degree screen. This is the position, or degree setting, of the second sequence where the end gun needs to turn OFF. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10 degree increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1 degree increments. For the example shown on the previous page, the end gun #1 program – sequence #2 – end degree setting would be 150 degrees.

EGUN #1 PROGRAM
SEQ02 END: 150.0°

Now press the “Setup/Next” key to advance to the end gun #1 program – sequence #3 – beginning degree screen. This is the position, or degree setting, of the third sequence where the end gun needs to turn ON. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10 degree increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1 degree increments. For the example shown on the previous page, the end gun #1 program – sequence #3 – beginning degree setting would be 210 degrees.

EGUN #1 PROGRAM
SEQ03 BEG: 210.0°

Now press the “Setup/Next” key to advance to the end gun #1 program – sequence #3 – end degree screen. This is the position, or degree setting, of the third sequence where the end gun needs to turn OFF. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10 degree increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1 degree increments. For the example on the previous page, the end gun #1 program – sequence #3 – end degree setting would be 240 degrees.

EGUN #1 PROGRAM
SEQ03 END: 240.0°

Now press the “Setup/Next” key to advance to the end gun #1 program – sequence #4 – beginning degree screen. This is the position, or degree setting, of the fourth sequence where the end gun needs to turn ON. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10 degree increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1 degree increments. For the example on the previous page, the end gun #1 program – sequence #4 – beginning degree setting would be 300 degrees.

EGUN #1 PROGRAM
SEQ04 BEG: 300.0°

Now press the "Setup/Next" key to advance to the end gun #1 program – sequence #4 – end degree screen. This is the position, or degree setting, of the fourth sequence where the end gun needs to turn OFF. Press either the "Forward Depth + 1" key to increase or the "Forward Depth – 3" key to decrease this setting by 10 degree increments. Press either the "Reverse Depth + 2" to increase or the "Reverse Depth – 4" key to decrease this setting by 0.1 degree increments. For the earlier example, the end gun #1 program – sequence #4 – end degree setting would be 330 degrees.

EGUN #1 PROGRAM
SEQ04 END: 330.0°

Now press the "Setup/Next" key to advance to the end gun status screen. End gun #1 is now programmed and will operate as per the program unless the status is changed. Remember, it is against the law in most states to spray water on state and county roadways. Auxiliary 1 can be programmed and activated the same way. If you want to program AUX1, press the "Forward Depth – 3" key and follow the same steps as described for programming end gun #1 above. To return to the normal operation screen, press the "Setup/Next" key.


EGUN1 Running

1)EGUN1 2)IS ON
3)AUX1 4)IS OFF

AUX1 Off

Sector Programming

Sector programming is a useful tool when you want to water certain sections (sectors) of the field with different application rates. There are two different sector programs with the capability to water up to ten different sectors per sector program. You must pick the beginning and ending degrees of each sector and the forward and reverse application depths of each sector. Only one sector program can run at any given time. In the example shown here, sector program #1 needs to be programmed as per the following conditions. The system needs to apply 0.75" between 270° and 90° (sector #1). The system needs to apply 0.50" between 90° and 180° (sector #2). The system needs to apply 0.25" between 180° and 270° (sector #3). Always configure the sector programs with a clockwise rotation from 0°. Sequences should also be numbered in consecutive order in a clockwise rotation from 0°. The application depth on the normal operation screen will apply to areas not covered by an active program.

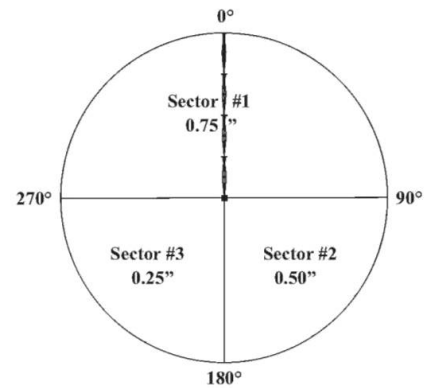

Press and hold the "Program" key for 3 seconds to advance to the main program screen.

Now press the "Reverse Depth + 2" key to advance to the sector program status screen. At the sector program status screen, the operator can either configure the settings for both sector programs or toggle each sector program ON/OFF. Press the "Forward Depth + 1" key to configure sector program #1 or press the "Forward Depth – 3" key to configure sector program #2. Press the "Reverse Depth + 2" key to change the status of sector program #1 to either STOPPED or RUNNING. Press the "Reverse Depth – 4" key to change the status of sector program #1 to either STOPPED or RUNNING. Do not change the status of sector programs to RUNNING until the sector programs are properly configured as per the following instructions. Remember, only one sector program can run at any given time.

1)EGUN 2)SECTOR
3)PARK 4)RESET

1)SEC 1 2)STOPPED
3)SEC 2 4)STOPPED

Press the "Setup/Next" key to configure sector program #1 and advance to the sector program #1 – number of sectors screen. This is the number of areas the system needs to water with different application rates and positions. Press either the "Forward Depth + 1" or the "Forward Depth – 3" key to set the number of sectors. For the example shown earlier, the number of sectors would be 3.

SECTOR PROG. #1
NO OF SECTORS: 3

Now press the “Setup/Next” key to advance to the sector program #1 – sector #1 – beginning degree screen. This is the position, or degree setting, of the first sector where the system needs to start applying the application depths programmed for sector program #1 – sector #1. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10° increments. Press either the “Reverse Depth + 2” key to increase or the “Reverse Depth - 4” key to decrease this setting by 0.1° increments. For the example shown earlier, the sector program #1 – sector #1 – beginning degree setting would be 270°.

SECTOR PROG. #1
SEC01 BEG: 270.0°

Now press the “Setup/Next” key to advance to the sector program #1 – sector #1 – end degree screen. This is the position, or degree setting, of the first sector where the system needs to stop applying the application depths programmed for sector program #1 – sector #1. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10° increments. Press either the “Reverse Depth + 2” key to increase or the “Reverse Depth - 4” key to decrease this setting by 0.1° increments. For the example shown earlier, the sector program #1 – sector #1 – end degree setting would be 90°.

SECTOR PROG. #1
SEC01 END: 90.0°

Now press the “Setup/Next” key to advance to the sector program #1 – sector #1 – forward application depth screens. This is the application depths the system will apply running clockwise between the two degree values previously programmed for sector program #1 – sector #1. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the depth by 0.01” increments for ENGLISH units or 1 mm increments for METRIC units. This depth must be greater than the minimum application depth entered during the setup process and less than 5.00 inches (127 mm). For the example shown earlier, the sector program #1 – sector #1 – forward application depth would be 0.75” (19.05 mm).

SECTOR PROG. #1
SEC01 fDPH: 0.75
English Units

SECTOR PROG. #1
SEC01 fDPH: 19.05
Metric Units

Now press the “Setup/Next” key to advance to the sector program #1 – sector #1 – reverse application depth screens. This is the application depths the system will apply running counter-clockwise between the two degree values previously programmed for sector program #1 – sector #1. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the depth by 0.01” increments for ENGLISH units or 1 mm increments for METRIC units. This depth must be greater than the minimum application depth entered during the setup process and less than 5.00 inches (127 mm). For the example shown earlier, the sector program #1 – sector #1 – reverse application depth would be 0.75” (19.05 mm).

SECTOR PROG. #1
SEC01 rDPH: 0.75
English Units

SECTOR PROG. #1
SEC01 rDPH: 19.05
Metric Units

Now press the “Setup/Next” key to advance to the sector program #1 – sector #2 – beginning degree screen. This is the position, or degree setting, of the second sector where the system needs to start applying the application depths programmed for sector program #1 – sector #2. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10° increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1° increments. For the example shown earlier, the sector program #1 – sector #2 – beginning degree setting would be 90°.

SECTOR PROG. #1
SEC02 BEG: 90.0°

Now press the “Setup/Next” key to advance to the sector program #1 – sector #2 – end degree screen. This is the position, or degree setting, of the second sector where the system needs to stop applying the application depths programmed for sector program #1 – sector #2. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10° increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1° increments. For the example shown earlier, the sector program #1 – sector #2 – end degree setting would be 180°.

SECTOR PROG. #1
SEC02 END: 180.0°

Now press the “Setup/Next” key to advance to the sector program #1 – sector #2 – forward application depth screens. This is the application depths the system will apply running clockwise between the two degree values previously programmed for sector program #1 – sector #2. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the depth by 0.01” increments for ENGLISH units or 1 mm for METRIC units. This depth must be greater than the minimum application depth entered during the setup process and less than 5.00 inches (127 mm). For the example shown earlier, the sector program #1 – sector #1 – forward application depth would be 0.75” (19.05 mm).

SECTOR PROG. #1
SEC02 fDPH: .50
English Units

SECTOR PROG. #1
SEC02 fDPH: 12.7
Metric Units

Now press the “Setup/Next” key to advance to the sector program #1 – sector #2 – reverse application depth screens. This is the application depths the system will apply running counter-clockwise between the two degree values previously programmed for sector program #1 – sector #2. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the depth by 0.01” increments for ENGLISH units or 1 mm for METRIC units. This depth must be greater than the minimum application depth entered during the setup process and less than 5.00 inches (127 mm). For the example shown earlier, the sector program #1 – sector #1 – reverse application depth would be 0.75” (19.05 mm).

SECTOR PROG. #1
SEC02 rDPH: 0.50
English Units

SECTOR PROG. #1
SEC02 rDPH: 12.7
Metric Units

Now press the “Setup/Next” key to advance to the sector program #1 – sector #3 – beginning degree screen. This is the position, or degree setting, of the third sector where the system needs to start applying the application depths programmed for sector program #1 – sector #3. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10° increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1° increments. For the example shown earlier, the sector program #1 – sector #3 – beginning degree setting would be 180°.

SECTOR PROG. #1
SEC03 BEG: 180.0°

Now press the “Setup/Next” key to advance to the sector program #1 – sector #3 – end degree screen. This is the position, or degree setting, of the third sector where the system needs to stop applying the application depths programmed for sector program #1 – sector #3. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease this setting by 10° increments. Press either the “Reverse Depth + 2” to increase or the “Reverse Depth – 4” key to decrease this setting by 0.1° increments. For the example shown earlier, the sector program #1 – sector #3 – end degree setting would be 270°.

SECTOR PROG. #1
SEC03 END: 270.0°

Now press the “Setup/Next” key to advance to the sector program #1 – sector #3 – forward application depth screens. This is the application depths the system will apply running clockwise between the two degree values previously programmed for sector program #1 – sector #3. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the depth by 0.01” increments for ENGLISH units or 1 mm increments for METRIC units. This depth must be greater than the minimum application depth entered during the setup process and less than 5.00 inches (127 mm). For the example shown earlier, the sector program #1 – sector #3 – forward application depth would be 0.25” (6.35 mm).

SECTOR PROG. #1
SEC03 fDPH: 0.25
English Units


SECTOR PROG. #1
SEC03 fDPH: 6.35
Metric Units

Now press the “Setup/Next” key to advance to the sector program #1 – sector #3 – reverse application depth screens. This is the application depths the system will apply running counter-clockwise between the two degree values previously programmed for sector program #1 – sector #3. Press either the “Forward Depth + 1” key to increase or the “Forward Depth – 3” key to decrease the depth by 0.01” increments for ENGLISH units or 1 mm increments for METRIC units. This depth must be greater than the minimum application depth entered during the setup process and less than 5.00 inches (127 mm). For the example shown earlier, the sector program #1 – sector #3 – reverse application depth would be 0.25” (6.35 mm).

SECTOR PROG. #1
SEC03 rDPH: 0.25
English Units


SECTOR PROG. #1
SEC03 rDPH: 6.35
Metric Units

Now press the “Setup/Next” key to advance to the sector program status screen. Sector program #1 is now programmed. To run sector program #1, you must be sure the status is set to RUNNING. If the status of sector program #1 is set to STOPPED, then press the “Reverse Depth + 2” key to change the status of sector program #1 to RUNNING. Do not change the status of sector programs to RUNNING until sector programs are properly configured as per instructions in this section. Remember, only one sector program can run at any given time. Now press the “Setup/Next” key to advance to the normal operation screen.

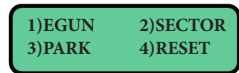

Park Programming

The park program is used to stop the system at a particular degree setting. To configure the park program, press the “Program” key and hold for 3 seconds to advance to the main program screen shown here.

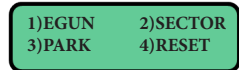

Now press the “Forward Depth -3” key to advance to the park program status screen. At the park program status screen, the operator can either configure the settings for the park program or toggle the park program on and off. Press the “Forward Depth + 1” key to configure the park program. Press the “Forward Depth - 3” key to change the status of the park program to either PARK ON or PARK OFF. Press the “Reverse Depth - 4” key to exit back to the normal operation screen. Do not change the status of the park program to PARK ON until the park program is properly configured as per the following instructions. Remember, once the system reaches the park destination, the park program status will revert back to PARK OFF. The operator must change status of park program to PARK ON each time it is desired to have the system park at the programmed position.



Press the “Forward Depth + 1” key to advance to the set park position screen. Press either the “Forward Depth + 1” key to increase or the “Reverse Depth + 2” key to decrease this setting by 10° increments. Press either the “Forward Depth - 3” key to increase or the “Reverse Depth - 4” key to decrease this setting by 0.1° increments.





Now press the “Setup/Next” key to advance back to the park program status screen. Press the “Forward Depth - 3” key to change the status of the park program to PARK ON to have the system park at the programmed position. Now press the “Reverse Depth - 4” key to exit back to the normal operation screen.




Reset Program

To reset end gun and auxiliary #1, sector programs #1 and #2, setup options, or revert back to factory defaults, press the “Program” key and hold for 3 seconds to advance to the main program screen. Now press the “Reverse Depth - 4” key to advance to the first of three reset screens.

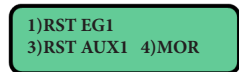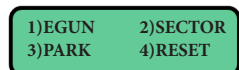

RST EG1: Press the “Forward Depth + 1” key to advance to the screen to reset the end gun #1 program. Press the “Reverse Depth - 4” key to revert back to the main program screen. Press the “Forward Depth - 3” key to reset the end gun #1 program. The screen shown will quickly appear to indicate the end gun program #1 has been reset.

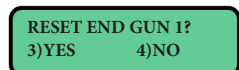

RST AUX1: Press the “Forward Depth - 3” key to advance to the screen to reset auxiliary #1 program. Press the “Reverse Depth - 4” key to revert back to the main program screen. Press the “Forward Depth - 3” key to reset auxiliary #1 program. The screen shown will quickly appear to indicate the auxiliary #1 program has been reset.

RESET AUX1?
3)YES 4)NO

*****RESET*****
*****END AUX1*****

MOR: Press the “Reverse Depth - 4” key to advance to the second of three reset screens. Press the “Forward Depth + 1” key to reset sector program #1 or the “Forward Depth - 3” key to reset sector program #2. Sector programs will reset the same way as the end gun programs illustrated. Press the “Reverse Depth - 4” key to advance to the third of three reset screens. Press the “Forward Depth + 1” key to reset all data back to factory defaults. This includes all setup menus, end gun programs, sector programs, etc. Press the “Forward Depth - 3” key to reset the setup menu only. These commands will reset the same way as the end gun programs illustrated previously. Press the “Reverse Depth - 4” key to exit back to the normal operation screen.

1)RST SEC1
3)RST SEC2 4)MOR

1)RST FACT DEFLT
3)RST SET 4)EXIT

STARTING THE SYSTEM

The precision Application Controller (PAC III) is a micro-processor controlled module that controls the following functions:

- Digital Percent / Depth of Application Control
- Displays Position (degrees) utilizing Resolver or Navigator GPS Option
- Displays Status Updates
- Auto-Restart
- Pressure Shutdown (w/optional Pressure Switch)
- Frost Shutdown (w/optional Temperature Probe)
- Frost Restart (w/option Temperature Probe)
- Auto-Reverse (by degrees or w/optional Tower Auto-Reverse)
- Stop Delay
- Remote Communication (optional)
- Two End Gun or Auxiliary Programs
- Two Sector Programs (up to ten Sectors per Program)
- Park Command (by degrees)

If the system has just been installed, the generator (or its direction of rotation) has been changed, or the power service has been worked on or changed; have your service person check the system for proper phasing. Knowing the functions of the various controls in the main control panel is necessary for the operation of your irrigation system. The system is electrically connected to your water supply so that if one fails, the other will shut down. For this reason, you must coordinate the operation of the water supply and the system controls. The following procedures are for typical installations. If your installation is other than typical, consult your Reinke dealer or service person.

1. Observe field and system conditions to be sure the system and system's path are clear of people and obstacles. See "System Safety" section at the beginning of this manual for more information.
2. If you want to run water with the system, ensure the electric pump control is enabled and safe to start as recommended by your pump manufacturer. Then turn the pump panel disconnect switch to the ON position.
3. If your system utilizes an optional generator switch to control a combustion engine-driven well and/or generator, turn the generator switch to the START position. Start the engine following all engine manufacturer's safety and operating instructions.
4. Turn the main disconnect switch to the ON position.
5. Observe the voltage on the main control panel voltmeter. This meter should read 456-504 VAC, 60 HZ (380-420 VAC, 50 HZ) on 480 VAC systems or 230-250 VAC, 60 HZ on 240 VAC systems. At no time, should the operational voltage read outside these parameters.
6. Turn the system power switch to the ON position.
7. Turn the water supply switch to the ON position if you want to run water with the system. Turn the water supply switch to the OFF position if the system is to run dry.
8. If the system is equipped with an optional low pressure shut down, turn the pressure override switch to the BYPASS position.

9. When the system is equipped with the optional auto-stop cam plate option, it may be necessary to turn the park override switch to the BYPASS position until the system moves off the auto-stop ramp. See “cam plate switches” on page 35.
10. If the system is equipped with the optional low temperature (frost) shutdown kit, turn the switch to the AUTO position for normal operation. This will ensure the system will shut down if the temperature falls below the temperature set on the frost control board on the back plate of the main control panel. At no time, should the system be operated with water in potential icing conditions. Set the switch to the BYPASS position if you want to move the system without pumping water through it at temperatures below 45°F.
11. Set the PAC III timer to the desired water application.
12. Turn the direction switch to the desired direction. FORWARD = Clockwise and REVERSE = Counterclockwise. See “Direction Switch” on page 11.
13. Push the start button and hold for three (3) seconds or less. You should hear the magnetic contactor engage (snap) and the system should start. If not, repeat step 13 and release the button. If another snap is heard, a malfunction is indicated. See “Start Button” on page 11. Do not hold the start button in for more than three (3) seconds as this will override the safety circuits.
14. If the system is equipped with an optional low pressure shut down: once the system has reached operating pressure, turn the pressure override switch to the AUTO position.
15. When the system utilizes an optional generator switch to control a combustion engine-driven well or generator, turn the generator switch to the RUN position.
16. If the system is interlinked with a chemigation pump or other auxiliary device, turn the chemigation/auxiliary switch to the ON position.
17. When the system is equipped with an optional end gun, turn the end gun switch to RUN if you desire to operate the end gun automatically. Turn the switch to the STOP position if you do not desire to operate the end gun.
18. If your system is equipped with the optional auto-stop cam plate option, and you desire to park the system, set the auto-stop ramp to the desired location and turn the “Park Override Switch” to the AUTO position. See “Cam Plate Switches” on page 35.

About the Generator

Reinke Manufacturing Co., Inc. supplies compact generator models that are a suitable source of electrical power for an irrigation system. The generator is normally driven from the same engine as the well pump. The drive consists of a double v-belt arrangement. The generator can be mounted near the engine regardless of whether the engine is trailer-mounted or secured to a concrete base.

The generator voltage is controlled by the engine speed. The voltage should not fall below 456 or go above 504 Volts. This should correspond to a generator RPM of 1750 to 1825. The generator RPM for 60 HZ output is 1800 (1500 RPM for 50HZ output). At no time, should the operational voltage read in excess of +5%. The generator pulley may initially be rotated either direction to generate power.



If the generator rotation is ever reversed later, the system will be out-of-phase. Call your Reinke dealer or service person to correct the phasing problem if you plan to operate the generator while rotating it in the opposite direction.

NOTE: The generator warranty requires that all combustion engines coupled to a generator, driving the system, must have a governor, a tachometer, and a safety load meter. The generator and system controls will be damaged by over, or under, engine speeding.

PRIMARY SETTINGS

System Speed

A speed chart with an adhesive back is provided with each system. The information given on the chart has been specifically calculated for each particular installation. Two sets of numbers are given on this chart: the percent timer setting for various application amounts and the time it takes to complete one revolution at these settings. Place the sticker on the main control panel front where it can be referenced in the future.

		Reinke Manufacturing Co. Inc. 101 Reinke Road P.O. Box 166 Deshler, Nebraska 68340 USA (402) 365-7251 www.reinke.com	
System Serial No:		System Flowrate (gpm):	
Owner's Name:		System Press. (psi):	
End (H) Tower Tire Size:		(H) Center Drive Gear Ratio:	
		(H) Speed @ 100% (fpm)	
		End Gun Model No:	
Water Application Depth (in):			
Percent Timer Setting 60 Hz.:		100%	
Application Duration (hr : min):			
End Gun Trip Adjustment:		1/4 inch at the cam wheel is equivalent to feet at the end of the system.	

The speed chart has been calculated for ideal conditions. Actual conditions may vary from chart accuracy. When the system is used to apply fertilizer or pesticides, a high level of accuracy is desired. The operator can calculate speed chart data based on the actual performance of the system. Ask your Reinke dealer representative for assistance calculating the actual rotation time and the correct percent timer setting before you start.

The percent timer setting can be calculated using the following formula:

$$\% = \frac{GPM \times 320 \times W}{D \times L \times L \times S}$$

Where:

- GPM = Gallons per minute supplied to the pivot.
- W = Distance from the pivot to the end wheel track in feet.
- D = Desired depth of water to be applied in inches.
- L = Length of the system coverage in feet.
- S = Speed of end tower in feet per minute.

“L”

LENGTH OF THE SYSTEM

In most cases, the length of the system coverage varies because end gun sprinkler(s) are used in the corners only. Therefore, using an “L” value equal to the average coverage length will give the best results.

“S”

GROUND TRAVEL SPEED

Ground travel speed is measured in feet per minute.


End Gun Settings




Caution

In most states, it is unlawful to spray water on state and county roadways. This is a serious hazard and must not be allowed.

The end gun switch is the bottom switch on the cam wheel mounting plate. It utilizes a 90-degree increment switch and is activated by an 8-prong actuator contacting a movable clamp-on trip on the cam wheel. Line up the 45 degree prong of the 8-prong actuator so that it hits the center of the clamp-on trip thumbscrew. When the green bar of the 8-prong actuator is in the horizontal position, the switch is ON. When the red bar of the 8-prong actuator is horizontal, the switch is OFF. To activate the end gun, place a clamp-on trip on the cam wheel so it turns the 8-prong actuator. Make sure the end gun is properly set to the arc settings below, before installing the clamp-on trip on the cam wheel. Install the next clamp-on trip on the cam wheel when the end gun starts to reach its boundaries. Repeat this procedure in each of the corners where you desire to operate the end gun.

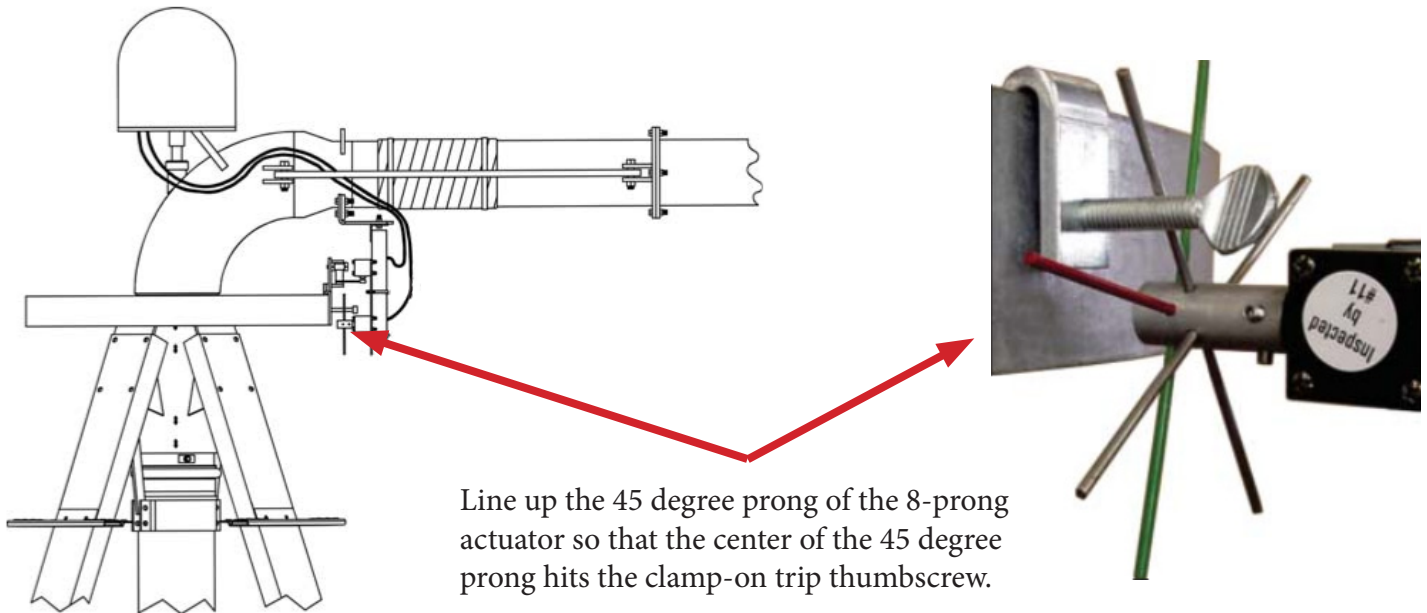


Line up the 45 degree prong of the 8-prong actuator so that the center of the 45 degree prong hits the clamp-on trip thumbscrew.

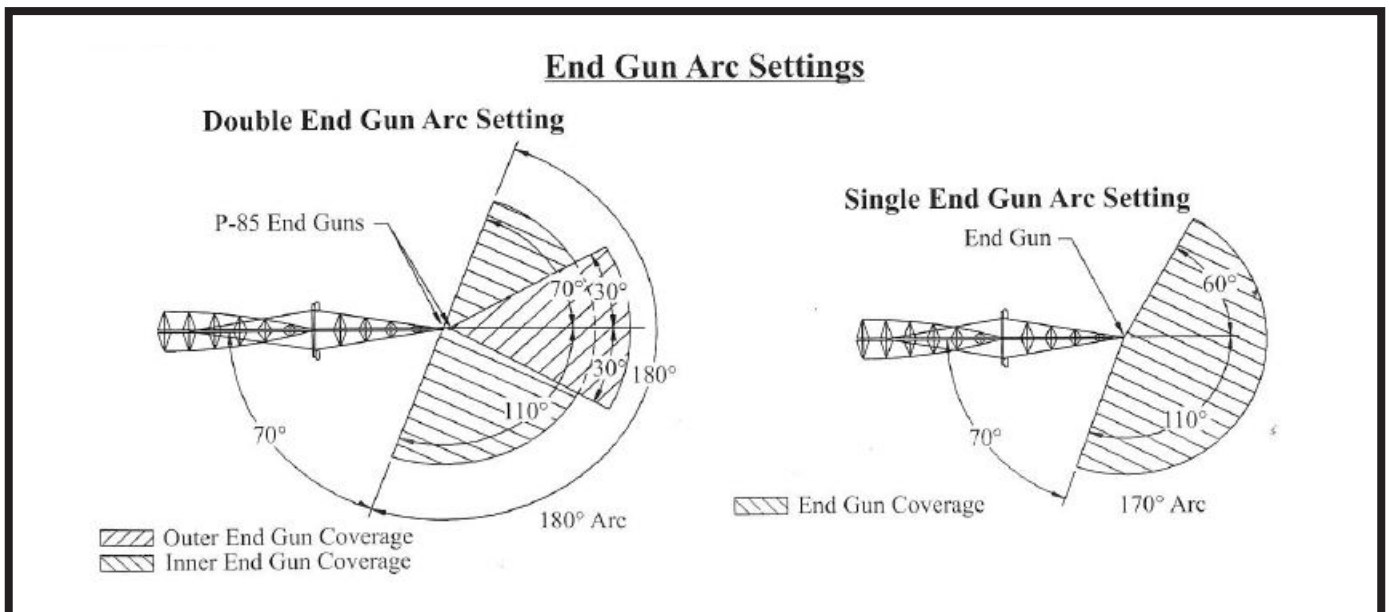

Cam Plate Switches (Optional)


Reinke Manufacturing also has an optional cam plate switch assembly for end gun control. This is an alternative to the traditional Reinke cam wheel switch assembly.

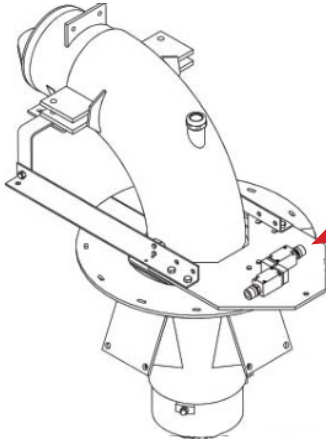

The end gun switch is a plunger switch activated by rubber ramps located on top of the cam plate. See the illustration here for details.

End Gun Switch Ramp

The end gun switch ramps fit onto a metal retainer plate bolted to the cam plate. Place the ramp so the end gun plunger switch contacts the ramp where the end gun is to be activated and the end gun plunger switch exits the ramp where the end gun is to be deactivated. The ramp may have to be trimmed to achieve the desired area. Make sure the end gun is properly set to the arc settings on the previous page.

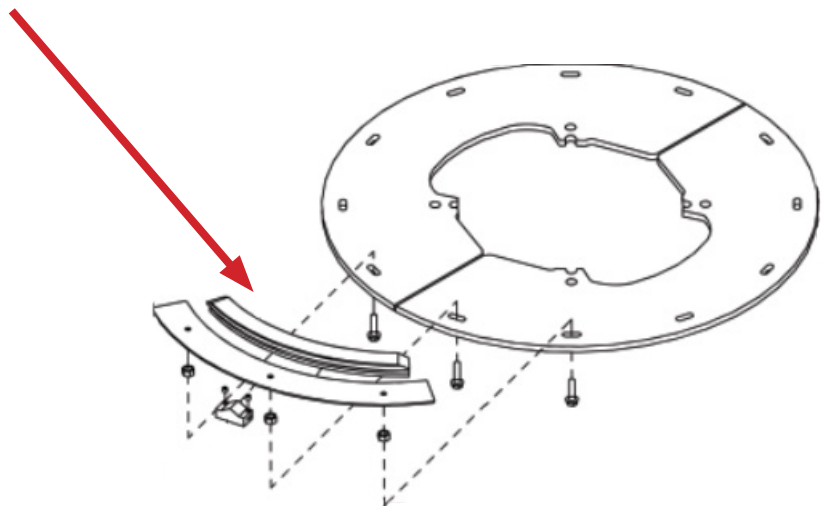


PART CIRCLE OPERATIONS

Part circle systems require safeguards to make sure the system doesn't go beyond desired boundaries. There are options to either stop, or automatically reverse, the system when it reaches the end of the run. These mechanical control options are either located at the pivot center or on a tower. **All part circle systems require a physical barricade to constrain the system in the event of a control failure.**

Disclaimer

Reinke disclaims any and all liability (including any liability created pursuant to the Irrigation Systems Warranty) with regard to damage to the irrigation system, or to other property, or personal injury or death, caused by improper installation or maintenance of Reinke-supplied auto-reverse or auto-stop switches or tower barricades, or by use of customer-supplied barricades.



 **Warning** *All auto-stop and auto-reverse devices require the use of a barricade in the tower wheel track. The barricade should extend to the inside of the track to accommodate possible movement of the tower. The system may become shorter due to misalignment, but it cannot grow longer. See the barricade drawings on page 38.*

Pivot Center Options

Before starting the system, check the cam or trips and make sure they are in the desired position. When initially starting the system, make a point of being nearby when the switches are due to trip. This could prevent a catastrophe if a trip is located in the wrong position on the cam wheel or cam plate.


Pivot Auto-Stop Option

The auto-stop switch is the top switch on the switch mounting plate. This switch has a wide trip arm with a roller on the end. The heads of the auto-stop switch have a momentary contact. This allows the switch to trip from side to side and return to the center position. The auto-stop trip is a short arm with a flap attached to it. A pin on the bottom stops the rotation of the flap. There is a left and right trip provided with each auto-stop switch assembly. Each trip is differentiated from the other by the location of the pin at the bottom of the trip. The pin on the right trip will be on the left side of the flap when it is observed mounted on the cam wheel. The left trip will be the opposite. This arrangement allows the switch to pass through the trip when you wish to reverse the system the other direction. To restart the system after it has been stopped by the auto-stop switch, the switch arm must be returned to the center position. To do this, simply move the switch arm beyond the stopped position, rotate the flap up and allow the auto-stop switch to pass through the trip. This will allow the switch to rotate the flap when the system reverses the other direction. Be sure you have changed the direction switch to move the system in the opposite direction!

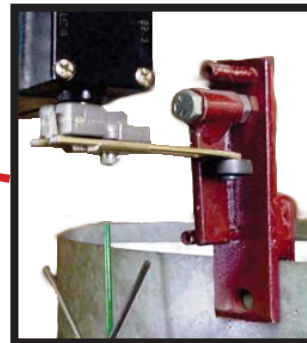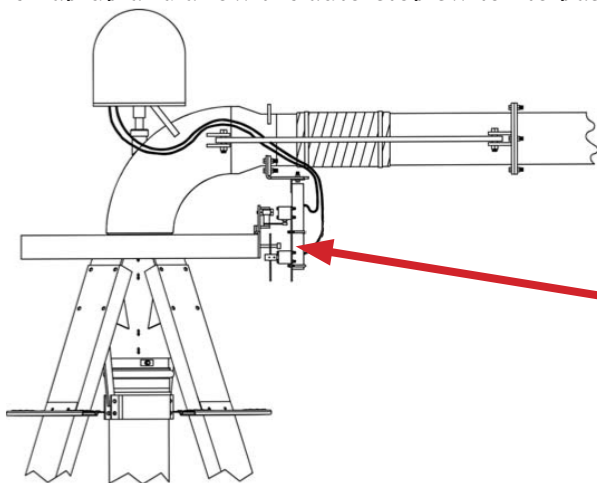


Cam Plate - Pivot Auto-Stop Option

The pivot auto-stop switch ramp fits onto a metal retainer plate bolted to the cam plate. To adjust the ramp, simply loosen the set screws and move the ramp to the desired point where the system is to auto-stop. Then re-tighten the set screws.

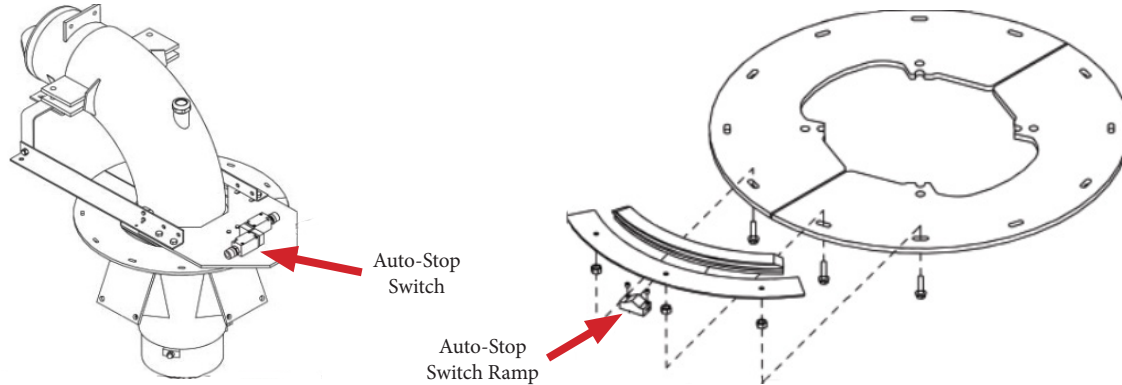

Tower Options

 **Warning** *All auto-stop and auto-reverse devices require the construction of a barricade in the tower wheel track. The barricade should extend to the inside of the track to accommodate possible movement of the tower. The system may become shorter due to misalignment, but it cannot grow longer. See the barricade drawings on the following page.*


Tower Auto-Reverse Option

Systems equipped with the tower auto-reverse option have the auto-reverse mechanism mounted on one of the outer towers. The tower auto-reverse switch is activated by a spring-loaded cable coupled to two auto-stop arms. As shown on the next page, when the tower moves and the auto-stop arm contacts a barricade placed in the tower wheel track, the cable moves, tripping the tower auto-reverse box, reversing the direction of the system.

The system can be reversed between barricades by placing the direction switch in the desired direction of travel and pushing the start button. It can then be restarted with the direction switch in the AUTO position. The system will continue to run in the direction that it was last moving. Two indicator lights have been placed in the inner panel door to indicate the direction of travel. After any idle period, the auto-reverse system must be tested to ensure proper operation. Visually check the lever and switch mechanism for damage. With the system running in auto-reverse, manually push the auto-stop arm opposite the direction of travel. The system should immediately reverse and the arm should return back to normal position. Repeat the process in the opposite direction to ensure the system reverses from both directions of travel. Pushing the auto-stop arm beyond the auto-reverse position will open the safety circuit and shutdown the system. The safety function must also be verified to ensure proper operation.


Tower Auto-Stop Option

The tower auto-stop switch is activated by a spring-loaded cable coupled to two auto-stop arms. As shown on the next page, when the tower moves and the auto-stop arm contacts a barricade placed in the tower wheel track, the cable moves, tripping the tower auto-stop switch. This action sends a signal to the main control panel, which disengages the starter contactor and stops the system.

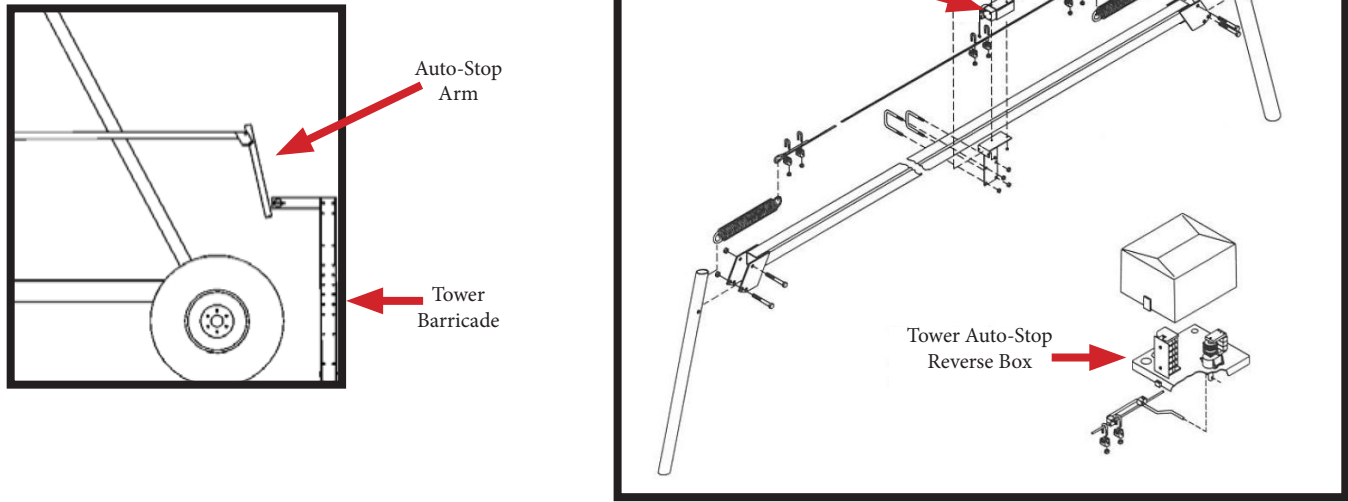

Tower Barricade


As stated earlier, all part circle systems are required to have an approved physical barricade to provide a safety backup in the case of an auto-stop or auto-reverse failure. Reinke Manufacturing provides two barricade options as shown below. One option is a portable barricade and the other is a stationary barricade. In both cases, it is critical that the barricade be properly placed and adjusted for reliable operation. Annual inspection of the barricade is part of the maintenance inspection.

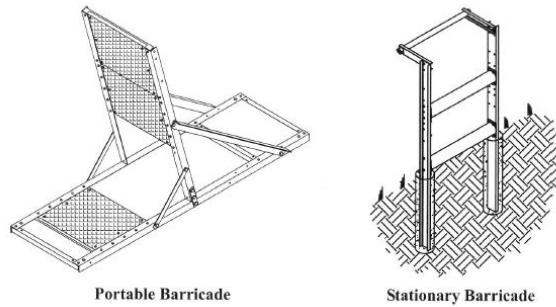

Note: These barricades are designed to be used on Reinke Systems, equipped with any auto-reverse or auto-stop option.

Warning *Great care must be taken to make sure the system alignment is maintained and the barricade remains centered on the wheel track.*

Proper Adjustment of the Reinke Stationary Barricade:

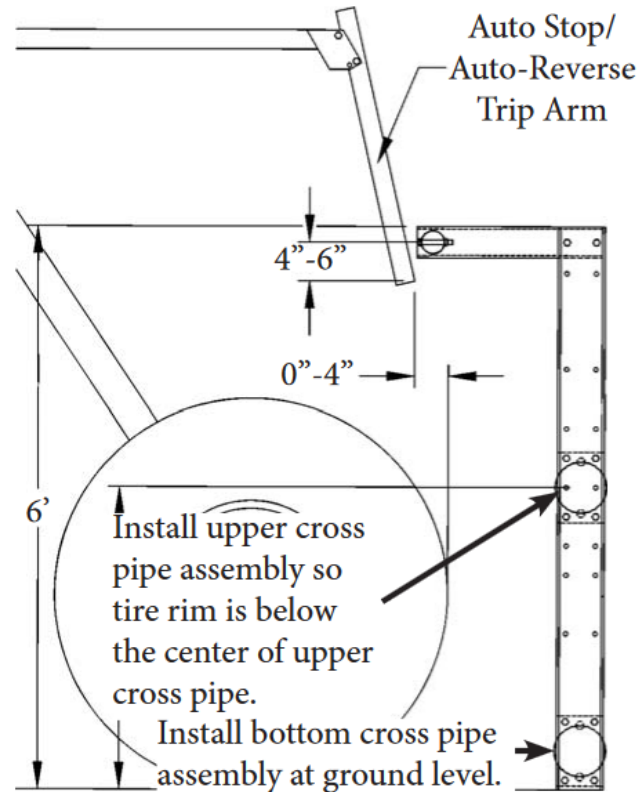

- The barricades are designed for use with systems having the following tire sizes: 11.2 x 24, 11 x 22.5, 14.9 x 24, 16.9 x 24, and 11.2 x 38.
- Center the barricade in the tower wheel track where the tower auto-stop or tower auto-reverse switch is mounted.
- The portable barricade must be adequately staked down on all four corners to prevent barricade movement. Stake size will vary depending on soil type and field conditions. The minimum stake size is 1" x 36" with cap heads. **The system warranty is void if the barricade is not adequately staked.**
- The stationary barricade channels must be set in concrete in a 10" diameter hole and 48" deep.
- The system must be kept properly aligned. Changes in system alignment will vary the distance from the pivot point to the wheel tracks. Severe misalignment may cause the tower to miss the barricade completely.


Disclaimer

Reinke disclaims any and all liability (including any liability pursuant to the Irrigation Systems Warranty) with regard to damage to the irrigation system, or to other property, or personal injury or death, caused by improper installation or maintenance of Reinke-supplied auto-reverse switches or tower barricades, or by use of customer-supplied barricades.


OPTIONS

Disconnecting Spans

This option allows one person to disconnect and reconnect spans from the system. This enables the system to continue operating through the remainder of the field, leaving the unused tower(s) behind. Use the following instructions when disconnecting a span.

 **Danger** *DO NOT attempt to disconnect or reconnect disconnecting spans until the Reinke main control panel disconnect switch, and all pump disconnect switches, are locked in the OFF position.*

1. Remove pin and lower leg stands. Replace pin to secure leg stands.
2. Disconnect the span cable receptacle connection, typically located below the tower control box, and plug into empty receptacle on disconnected span. Remove control rods.
3. Separate the drop pipes and insert the provided plug in the drop pipe on the tower side.
4. A winch (optional) or other device is used to lift the hook joint out of the receiver joint and lower the span. To lower or lift the span without the winch option, you will need equipment capable of lifting 2,500 pounds and something to support the disconnected span while not in operation.
5. Detach the cable from the hook joint.
6. Switch the A/C toggle switch on the tower control box at the disconnected span to "C" (end tower). When the disconnected span is reconnected, switch the A/C toggle switch on the tower control box located at the disconnected span to "A" (intermediate tower).
7. This process is reversed when the span is reconnected. Allow the auto-stop switch on the top of the disconnecting span to shut the system down for reconnecting.

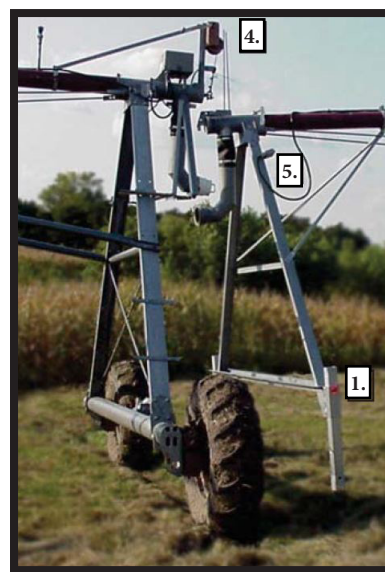

Chemical Injection

A flush time of at least ten minutes is typically recommended for center pivot systems. However, longer and low-gallon systems will require additional flush times. Allowances must also be made if the well and injection pump are not located at the pivot. A rough estimate for center pivot systems is one minute of flush time for each 100 feet of the center pivot system and mainline pipe. **THE SYSTEM WARRANTY IS VOID IF IT IS NOT FLUSHED AND MAINTAINED PROPERLY. CHECK AND ABIDE BY ALL LOCAL, STATE, AND FEDERAL LAWS AND REGULATIONS WHEN UTILIZING CHEMICAL INJECTION.**

Chemigation


Chemigation is the application of agricultural chemicals through center pivot irrigation systems. The main advantages to this technique are lower application costs and uniformity of application. The biggest disadvantage is the possibility of groundwater pollution. Some potential hazards are:

- Water flowing back through the chemical injection system, causing the chemical supply tank to overflow.
- Irrigation pumping plants shutting down from mechanical or electrical failures of the system, while the injection equipment continues to operate.
- Lack of a check valve on the irrigation line may result in the mixture of water and chemical siphoning back into the irrigation well and polluting the groundwater.

You can avoid these hazards by:

- Utilizing a check valve in the chemical injection line to stop the flow of water from the irrigation system into the chemical supply tank when the chemical injection pump is not operating.
- Interlocking the irrigation pumping plant and the chemical injection pump so if one stops, the other will also.
- The use of check and vacuum relief valves (anti-siphoning devices) on the irrigation pipeline.

Additional safety equipment could include a pressure switch in the injection line to detect a break in the line and a solenoid valve at the chemical tank outlet for a positive shutoff when the system shuts down. The injection system equipment should also include a calibration tube and the system should be calibrated before each application. Most injection systems include a built-in calibration tube, which allows the calibration to be re-checked periodically during application. (See illustration below.) See your local Reinke dealer for available chemigation systems.

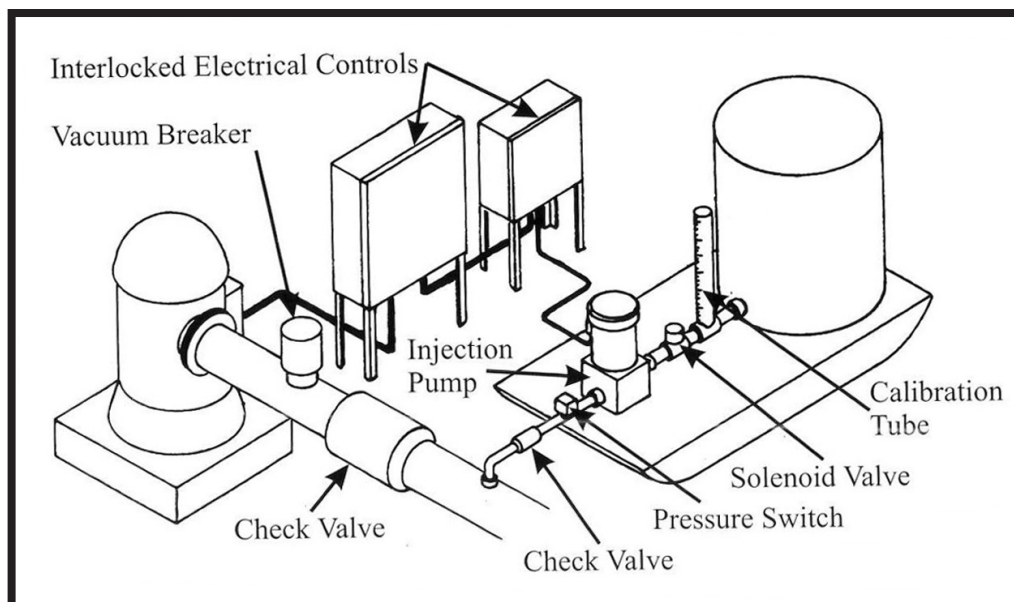

Fertigation

Fertigation is the application of fertilizers through center pivot irrigation systems. Fertigation is more popular on sandy soils. Sandy soils are more prone to leaching of fertilizers beyond the root zone. Fertigation allows for time release fertilizer application, thus reducing the potential for leaching and loss of fertilizer, and allowing the farmer to “spoon feed” crops. A word of caution: not all fertilizers are compatible with fertigation. Consult your fertilizer supplier before applying unfamiliar chemicals. Materials that should not be applied through irrigation systems include:

Anhydrous Ammonia: excessive nitrate loss, a calcium precipitate forms in the water.

Ammonium Polyphosphate: causes a precipitate to form in water.

Phosphoric Acid (or any acid): corrosive to steel and forms a precipitate in water.


See your local Reinke dealer for available fertigation systems.

Insectigation

Insectigation is the application of insecticides through center pivot irrigation systems. Always follow label directions! Allow time for a contaminated field to reach a safe level before re-entering the field. See your local Reinke dealer for available insectigation systems.

MAINTENANCE


All Reinke irrigation systems are designed for many years of use. However, studies have shown irrigation system reliability strictly depends upon good preventative maintenance. The following maintenance practices will help prolong the life of your Reinke system.


 **Danger** *DO NOT attempt to perform any maintenance procedures until the Reinke main control panel disconnect switch and all pump disconnect switches are locked in the OFF position. Electrical component troubleshooting and replacement should be performed by a certified Reinke Service Technician to ensure built-in safety features remain intact. Replace all protective guards and shields before restoring power to the system.*

Wheel Gearbox Maintenance

Non-Towable Gearboxes

The Reinke 50:1 wheel gearboxes use a good quality S.A.E. 85W-140 that meets or exceeds A.P.I. - GL.5 and IL.-21056 specifications. Change the oil after the first year of service and every three years thereafter. Fill the gearboxes so oil level is just above worm gear. Oil capacity is approximately one (1) U.S. gallon. Before and after each irrigation season, remove the drain plug just long enough to drain any condensed water.

 **Caution** *DO NOT overfill these gearboxes! Overfilling may result in seal damage.*

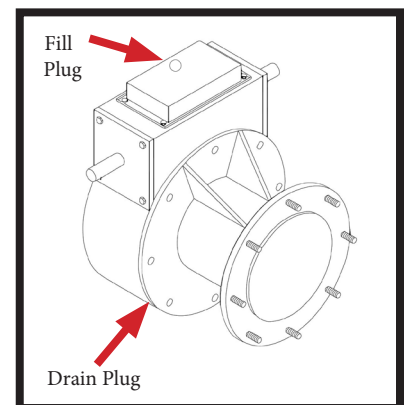


Center Drive Gearbox Maintenance

Three Phase (480 VAC) Center Drive Gearboxes


The Reinke helical center drive gearboxes use a good quality SAE 20W-50 multi-viscosity engine oil; or ISO 460 or EP 460 gear oil. Change the oil after the first year of service and every three years thereafter. Fill the gearboxes so the oil level reaches the threads of the oil fill hole. (See illustration below.) Oil capacity is approximately 0.4 U.S. gallon.

Caution *Do not overfill these gearboxes! Overfilling may result in seal damage. Before and after each irrigation season, remove the drain plug just long enough to drain any condensed water.*

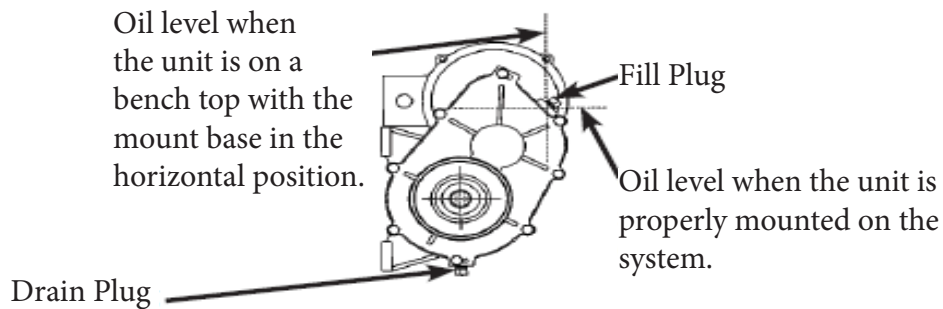

Single Phase (230 VAC) Center Drive Gearboxes

The Reinke 80:1 helical center drive gearboxes are composed of triple reduction 240 volt single phase 80:1 center drive, which is a complete integral gear and motor (P/N 112297) GR/MTR-UMC-CTR 80:1-06168-104A. These 80:1 gearboxes use a good quality SAE 50W or SAE 20W-50 multi-viscosity engine oil; or ISO 460 or EP 460 gear oil. Change the oil after the first year of service and every three years thereafter. Fill the gearboxes so the oil level reaches the threads of the oil fill hole. (See illustration on the right.) Oil capacity is approximately 72 ounces. Before and after each irrigation season, remove the drain plug just long enough to drain any condensed water.

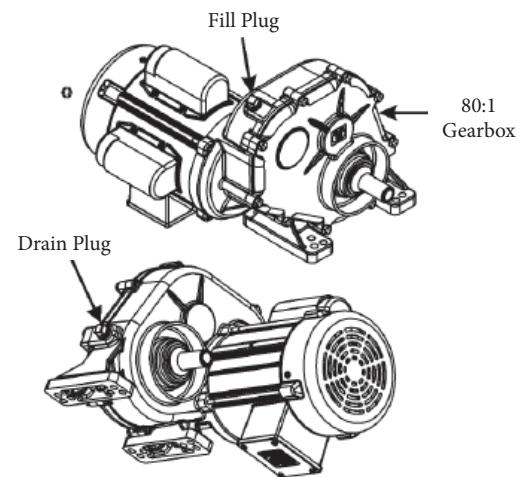


Caution *DO NOT overfill these gearboxes! Overfilling may result in seal damage.*


Initial and Preseason Maintenance

Before placing the system into service each season, check the following:



1. Make a visual check of all bolts in the system, making sure something has not become loose during the idle period. When the system has been newly installed, all the bolts should be checked with an end wrench to make sure they have been tightened by the erection crew. One loose bolt may cause serious structural damage.
2. Check the electrical boxes and wiring of the system to make sure the ground wires are secured and rodents or insects have not damaged the systems' mechanisms.
3. Flush the system. Place the disconnect switch in the OFF position. Only water is required for this procedure - the system does not need to move.

 Danger *DO NOT start the flushing procedure while the system is under water pressure. Removing sand trap caps while the system is under pressure can cause personal injury or death.*

Remove the sand trap cap and pump water through the system. This will flush out any foreign material that might plug the sprinkler heads or sprinkler valves. This is particularly important on newly installed systems, because of possible straw, dirt or any other material that may have accumulated in the pipe during erection. After the sand trap cap is back in place, pump water through the system and check the sprinklers for proper operation. The arc travel of the end gun should be set as the diagrams show on page 34. Also, check the system water pressure to see if it is operating at the proper pressure. If the water pressure has fallen, your pump may need adjustment or repair, or after time, the sprinkler head nozzles may be worn. These problems will reduce the uniformity of water application and should be corrected. If a sprinkler nozzle is replaced, make sure the new one is the same size. After flushing the system, check the function of the low pressure drains by pushing each one upward in a rotating motion. Low pressure drains are located on the bottom side of each hook joint, the last tower top, and on the end boom pipe.

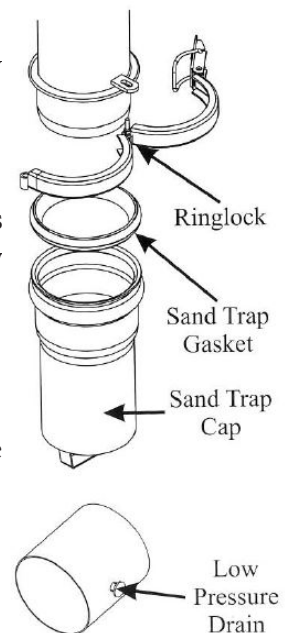

4. Grease fittings are located on the pivot (8 each), at any optional steel u-joints (1 each) and on any towable gearboxes (2 each). These fittings should be greased with good quality grease.

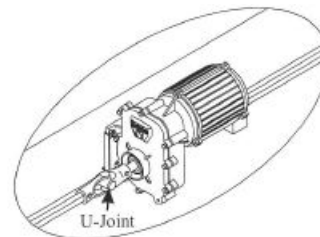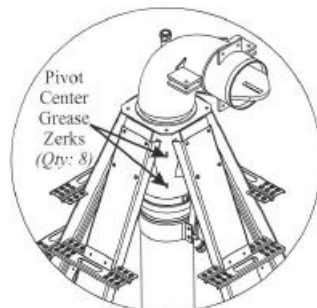


5. All automatic controls such as auto-stop, end gun, tower auto-stop, and tower auto-reverse should be cycled to check for proper operation. Consult your local Reinke dealer, or authorized service technician, for assistance.
6. If a booster pump is installed on your system, it should be inspected for proper operation. A second person should be located near the end boom. Turn the percent timer to zero and, with power to the system, press the start button. When the system is at normal operating pressure, turn the end gun switch to the ON position and check the phasing of the booster pump. If you were able to view it from above, you would see that the pump shaft would be turning in a clockwise direction when running. Operating the pump backward can damage the pump. When the end gun switch is OFF, the booster pump should be OFF. If the phasing needs to be changed, contact your Reinke dealer or service person.
7. Check the oil level in the center drive and wheel gearboxes. Water condenses in the gearboxes and should be drained. The water may be drained by loosening the drain plug on the bottom. When the plug is removed, if there is any water, it will be the first to drain out. Gears should be filled to the specifications on pages 42-43.

⚠ Caution *DO NOT overfill these gearboxes! Overfilling may result in seal damage.*

8. Tire pressure should be maintained according to the chart shown here. Also, inspect the tires for impending problems (cuts, breaks, etc.).
9. Main control panel switches should be cycled and checked for proper system operation. (See pages 10-12.)
10. If the system utilizes generator belts, check them for proper tension. (See illustration below.) Before starting the engine, remove any rodent nests from the engine fan cover.

Reinke Tire Inflation Chart Based on Manufacturer's Recommendations	
Tire Size	Max. Load & Infl. (lbs @ PSI)
11R x 22.5 (Recaps)	4000 @ 52
11.2 x 24	3900 @ 35
11.2 x 38	4410 @ 23
13.6 x 38	6965 @ 29
14.9 x 24	4640 @ 16
16.9 x 24	7215 @ 23

⚠ Caution *If the generator rotation is ever reversed later, the system will be out-of-phase. Call your dealer or service person to correct the phasing problem if you plan to operate the generator in the opposite direction.*

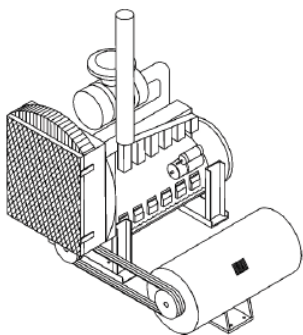


Note: The generator warranty requires that all combustion engines coupled to a generator, driving the system, must have a governor, a tachometer, and a safety load meter. The generator and system controls will be damaged by over or under engine speeding.

Maintenance During Season

1. Periodically check the built-in voltmeter on the main control panel inner door and make sure it reads 456-504 VAC, 60 HZ (380-420 VAC, 50 HZ) on 480 VAC systems or 230-250 VAC, 60 HZ on 240 VAC systems. At no time, should the operational voltage read outside these parameters. If it does, find out why and correct it. This will prevent possible damage to the drive motors and other electrical components. If your system uses a generator, excessive voltage indicates it is running over speed. This can damage the generator and the system's controls. Also check the tension of the generator drive belts. Loose belts can cause slippage and low voltage output may result. Exercise caution if you manually check your system for proper voltage using a multimeter.
2. Grease fittings are located on the pivot, at any steel u-joints, and on any towable gearboxes. These fittings should be greased approximately three times a season, depending on use, with good quality grease. (See illustrations on pages 42-43.)
3. The system should be inspected periodically. Look for under-inflated tires, oil leakage from gear boxes, structural damage from the result of severe storms, etc.
4. Periodically check the alignment of the system. The system is initially aligned when it is erected. Alignment is a very important factor in the operation of an irrigation system. A misaligned system develops very high stresses which could cause structural damage and reduced center drive and wheel gearbox life. If the alignment of the system needs to be reset, it is done by turning the adjusting screws on the control yoke located at each tower. It is better to turn both screws (in opposite directions) rather than making an alignment adjustment with one screw. The illustrations below show which way to turn the screws for the desired alignment. The descriptions for turning the screws are given for someone looking toward the end of the system.
5. Reinke Manufacturing recommends that the alignment and safety switches be replaced after 10 years of service to ensure reliable system operation.

Leading Bow


A leading bow can cause problems by creating extreme tension or pull that could cause structural damage.

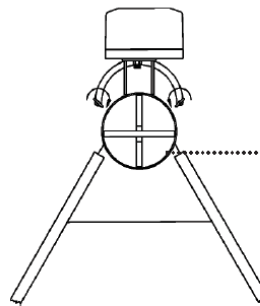

Turn thumbscrews as shown above to correct alignment if the tower is ahead with the system running in the forward direction or behind running in the reverse direction.


Reverse Bow


A reverse bow is very critical as it causes a compression of the entire system. When the spans are compressed, they tend to lose their inherent strength.

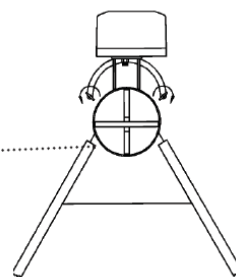

Turn thumbscrews as shown above to correct alignment if the tower is behind with the system running in the forward direction, or ahead running in the reverse direction.

When the system is correctly aligned, it will have a slight bow with the center tower leading. When the direction of travel is changed, the system should bow the same amount only in the opposite direction. If a tower becomes stuck, or some other problem causes it to stop, the towers toward the end of the system will continue to run until the misalignment safety circuit shuts the system down. This results in a bend in the system at that tower. See the drawing below. If the lagging tower is brought into alignment by continuing to run in the same direction, the outer towers will be forced outward to compensate. This causes considerable stress and possible damage to the system's structure. Therefore, after the problem has been corrected, run the system in the opposite direction so the outer towers run back even with the stalled tower. Then it is safe to operate the system in the desired direction.

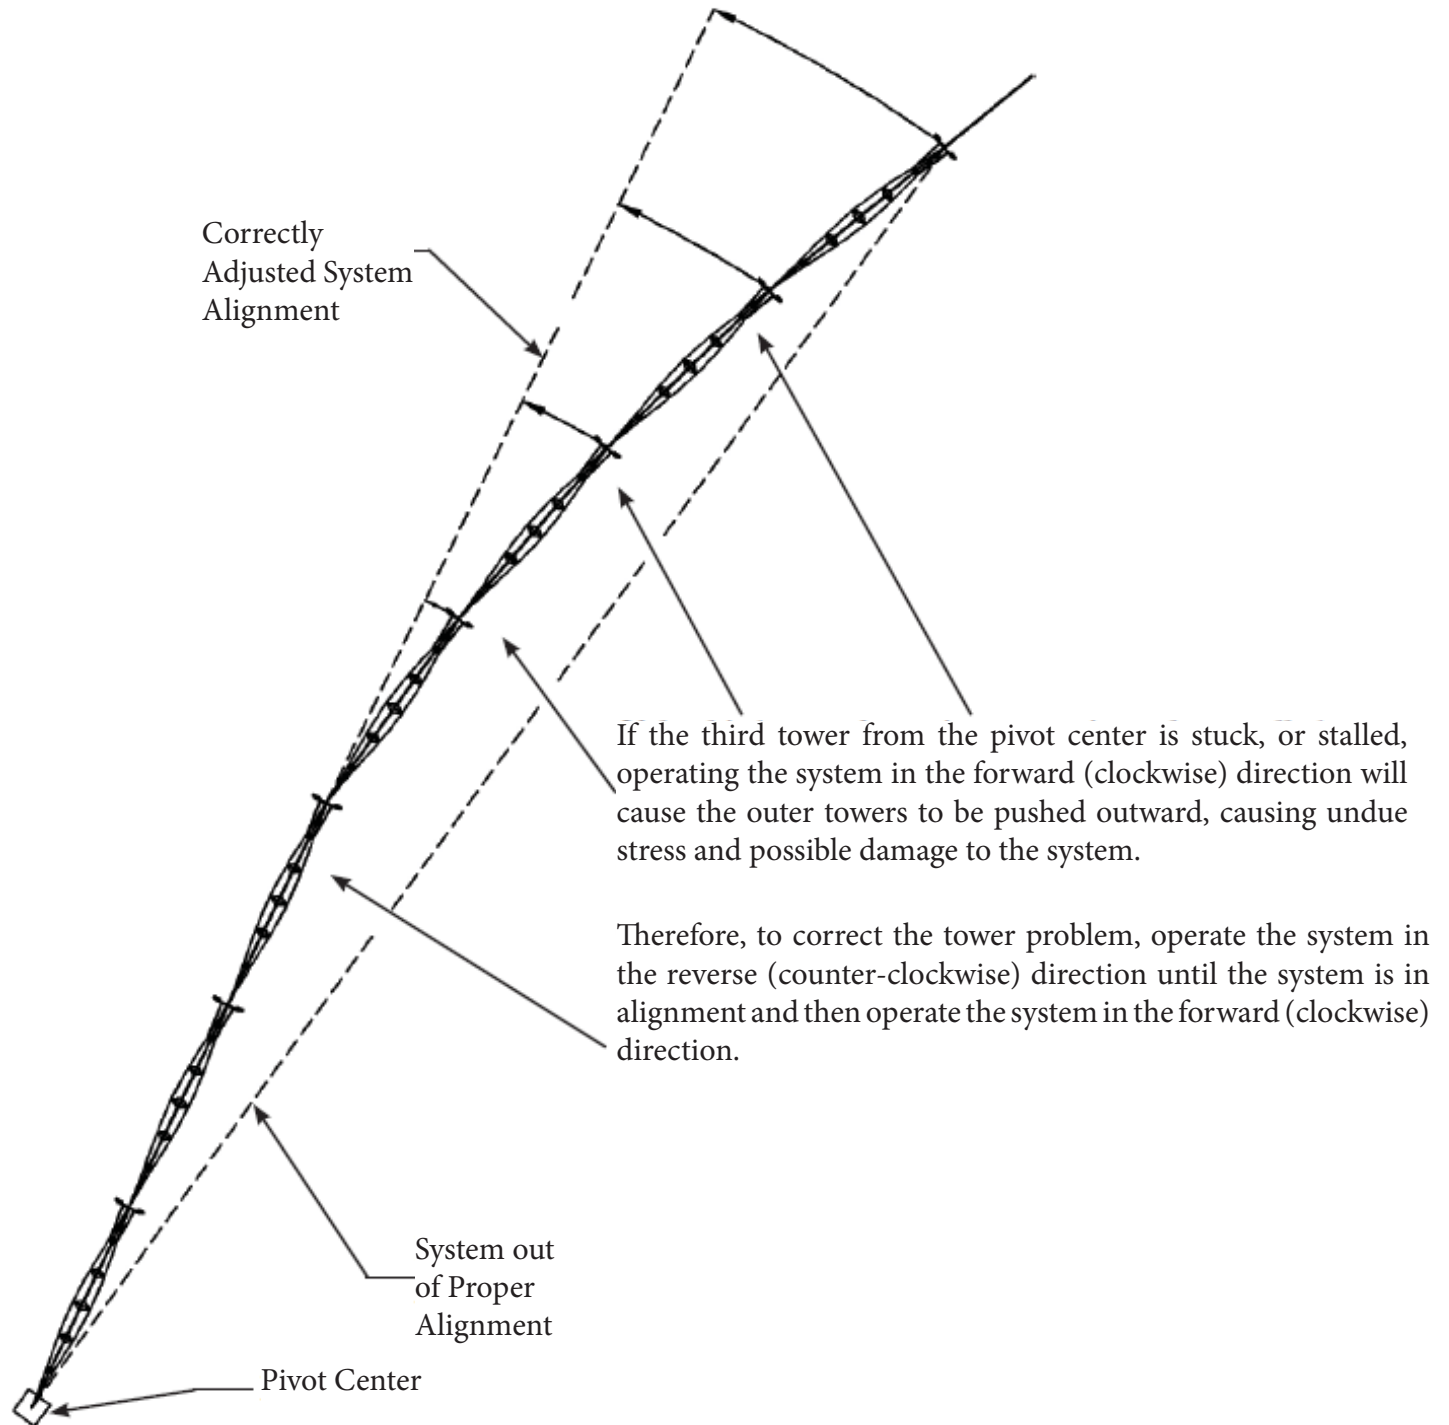

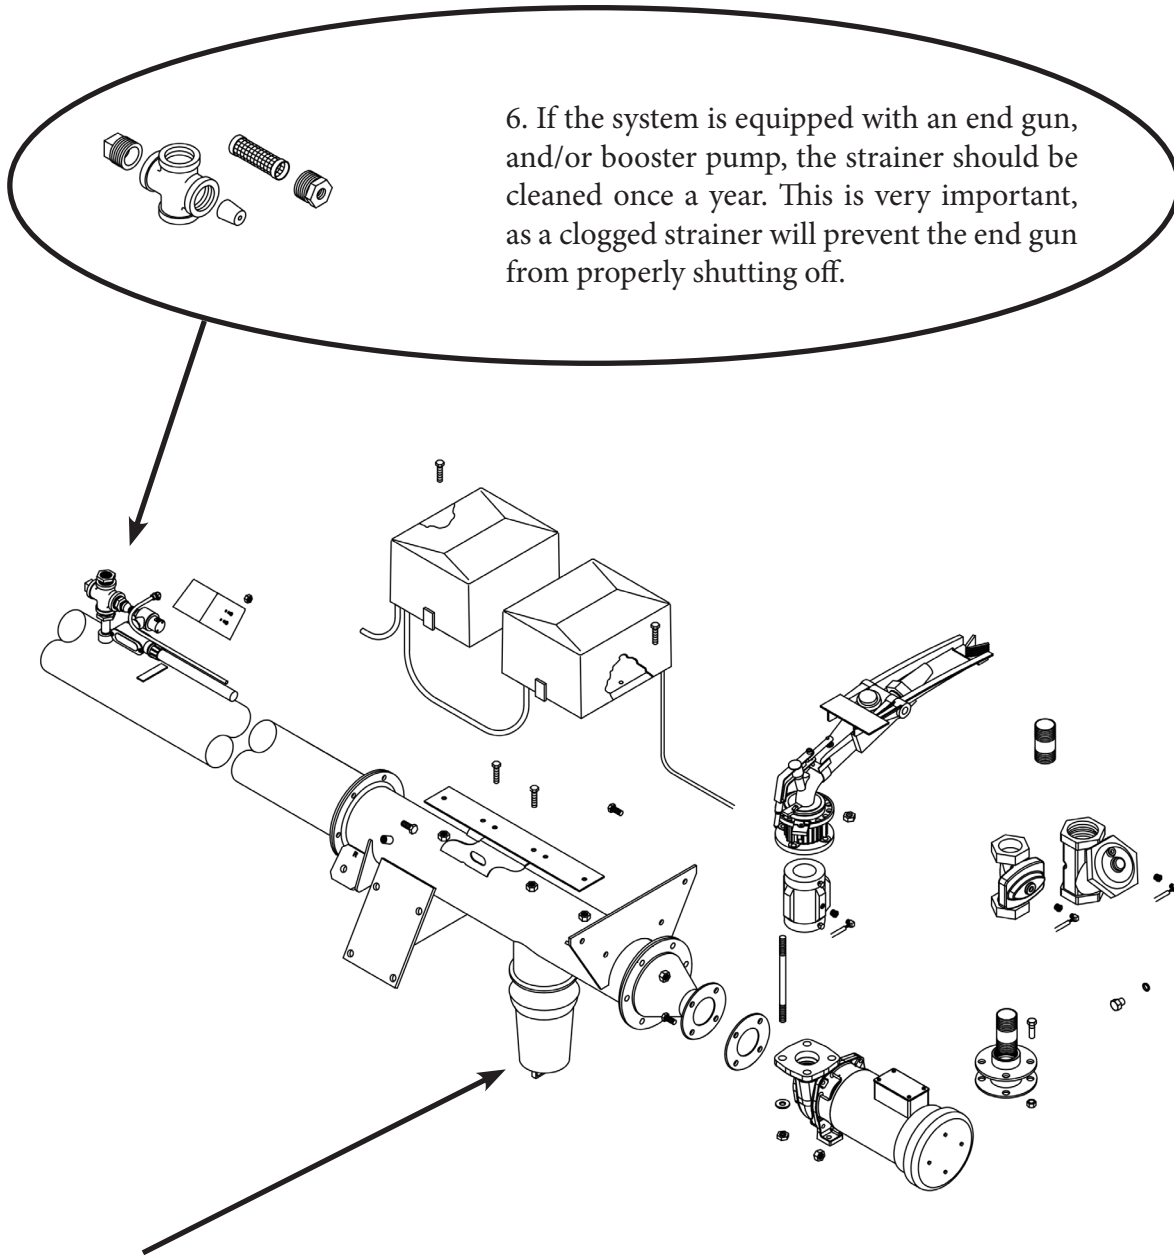


6. If the system is equipped with an end gun, and/or booster pump, the strainer should be cleaned once a year. This is very important, as a clogged strainer will prevent the end gun from properly shutting off.


7. Check the sand trap regularly for accumulation of sand or debris. If the sand trap is full, clean it out with the trap off, start the pump to flush the system. (See instructions on page 44.) Replace the trap once it has flushed. The sand trap may need to be cleaned weekly if the water supply is dirty or the well is pumping a large amount of sand.

Winterization Procedure

1. Park the system on a smooth surface, out of the wheel ruts. Also, park the system parallel to prevailing winds to avoid, as much as possible, the effects of damaging winds.

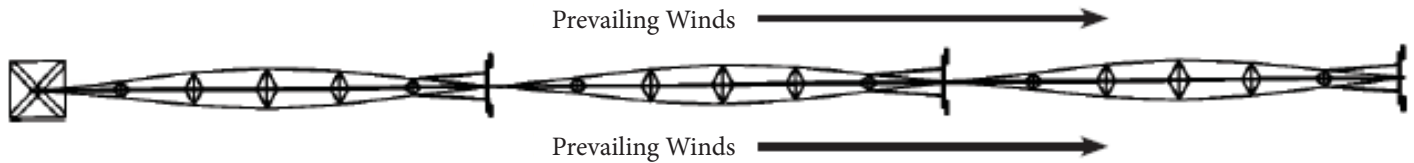


2. Flush the system following the same instructions found on page 44.
3. Check the low pressure drains by pushing each one upward in a rotating motion.
4. Grease fittings are located on the pivot (8 each), at any optional u-joints (1 each). These fittings should be greased with good quality grease. This will prevent corrosion and decrease the amount of moisture accumulation during the idle season.
5. Check the oil level in the center drive and wheel drive gearboxes. Water condenses in the gearboxes and should be drained. The water may be drained by loosening the drain plug on the bottom. When the plug is removed, if there is any water, it will be the first to drain out.

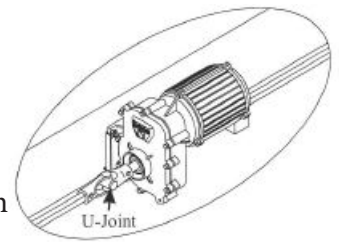

Caution *DO NOT overfill any of these gearboxes! Overfilling may result in seal damage. Gearboxes should be filled to the specifications on pages 42-43.*


6. Protect the drive train components from damage if livestock will be pastured during the off season.
7. Sometimes water is trapped between the well and the pivot bottom elbow. Some means of drainage should be installed (if none exists) on or near the check valve and in the underground pipeline.
8. Generator power cords, plugs, and receptacles should be protected with waterproof covers. Wrap the cords up and hang them up off the ground.

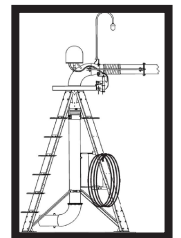


Swing Arm Maintenance

The SAC/SSAC has multiple grease zerks. Greasing the machine should occur annually, at the very least.


There is a grease zerk located on the leg above the wheel on the swing tower. Add grease until it starts coming out of the bottom of the leg. There is a zerk on each leg of the swing arm.

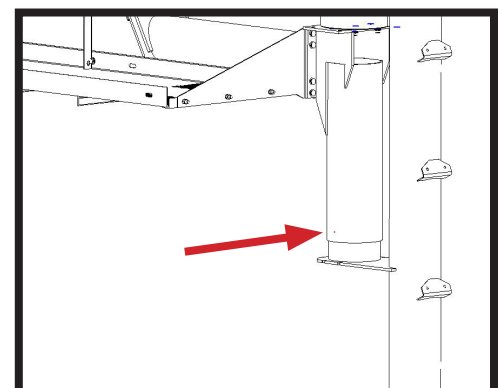


The next area to be greased is on the steering gear of the swing arm. There is one on each leg. Because the gear is on its back, as opposed to standing up, there is a grease zerk installed into the output shaft area. DO NOT overfill. There is also an expansion chamber that is installed to keep the pressure of the oil from leaking out.

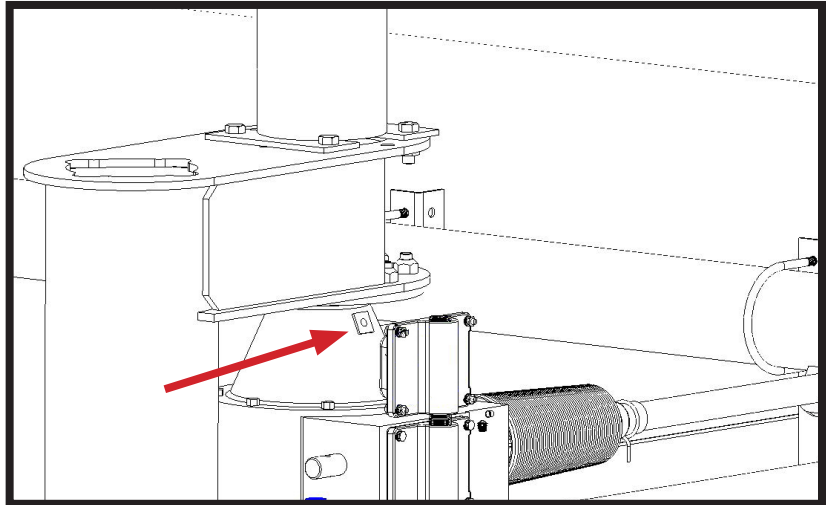

The last two grease zerks that are on the swing arm are located at the joint between the swing span and the hinge tower. They keep the ball greased so that the swing span can walk smoothly.

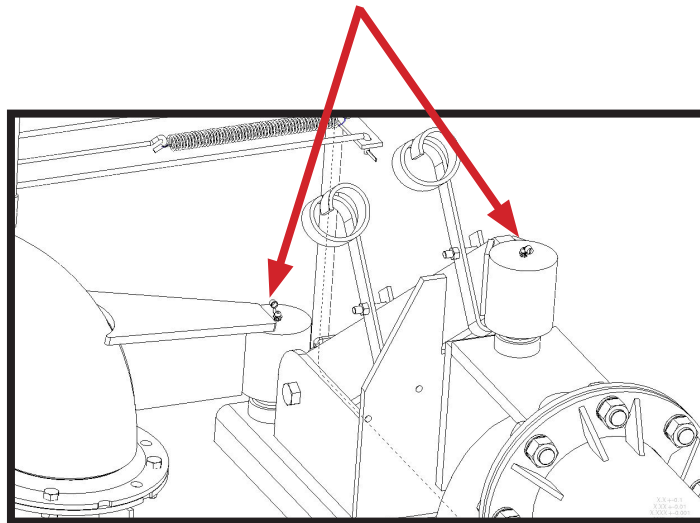

One post-season maintenance item on the swing arm is the elbow that gets the water from the parent machine to the swing span. The “U” pipe has a low pressure drain that can stick because the pressure never gets low enough to release the drain. Once the irrigation season is over, it is good practice to push the drain up and allow the water to drain so that it does not freeze and damage the system.

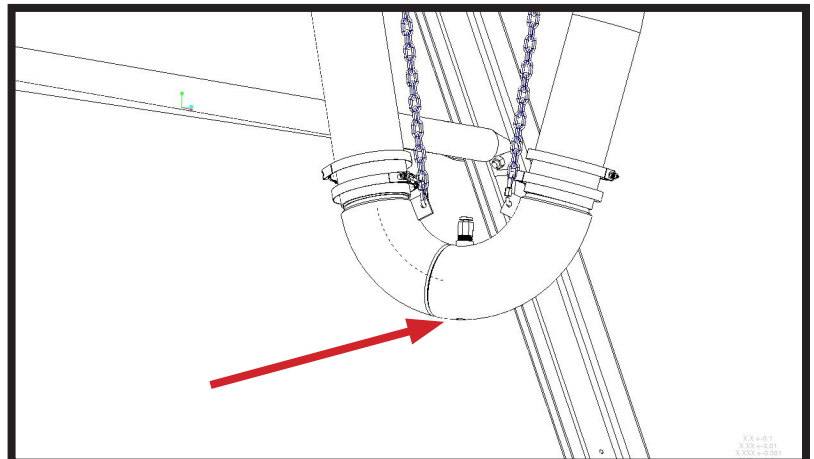

TROUBLESHOOTING



Before troubleshooting, turn the power at the main control panel OFF and LOCK in position. If you attempt to repair your system and are uncertain of your methods, contact your authorized service person. If a repair is made, replace all protective guards and shields before restoring power to the system.

As a system is being checked for errors, make notes of each situation. This will help to explain the possible problem, and what measures have been completed so far to correct it. The items on the following checklist should be used as a guideline, before contacting a service technician:

- System Serial Number including Model Number
- Optional Equipment (Auto Reverse, Auto Stop, Frost Control, etc.)
- Location of system in the field, and approximate time when the system shut down
- Alignment of the system
- What has been done since the system shut down

PROBLEM I: System will not continue to run when you release the start button.

Possible causes and solutions:

- Set the generator Start/Run switch to the START position.
- Set the pressure override switch to the BYPASS position.
- Set the park override switch to the BYPASS position.
- Make sure the system is not against a tower barricade.
- Check to see if the system is out of line. Check the alignment making sure a stuck tower, a flat tire, or broken u-joint has not caused the system to become out of line.
- A tower does not move. The center drive motors contain an internal overload switch that resets after shutdown. Contact your Reinke dealer or service technician if the problem persists.
- The tower auto-reverse system fails. Check the tower auto-reverse mechanism or contact your Reinke dealer or authorized service technician.

PROBLEM II: System shuts off in line.

Possible causes and solutions:

- Incoming power voltage surges or low voltage may cause the system to shut down.
- If a generator is used, check the belts to make sure they are tight. Make sure the motor is not overheating and shutting off.
- Check to see if the auto-stop switch is against a trip on the cam wheel or the tower is against the barricade. Adjust the switch trips or reverse the system away from the barricade if necessary.
- With the main disconnect switch in the OFF position, check the fuses in the main control panel with an ohmmeter. If no continuity is found in a fuse, replace it. Call your Reinke dealer or authorized service technician if you continue to blow fuses.
- Check fuses in the generator with an ohmmeter. Replace if necessary.

PROBLEM III: System shuts off out of line.

Possible causes and solutions:

- Check the tower where the misalignment occurs to see if the tower is stuck. If this is the case, reverse the system until it is back in line, then add rock or something to the wheel track so the tower can continue on its path.
- Check for flat tires, damaged gearboxes, or broken u-joints where the misalignment occurred.

PROBLEM IV: System will not move in either direction.

Possible causes and solutions:

- No 480 VAC or 230 VAC power to the system.
- A fuse is burned out in the main control panel.
- The start button is defective.
- The main control panel disconnect switch is bad.
- The direction switch is defective.

PROBLEM V: Sprinklers on the swing arm are ON when they should be OFF.

Possible causes and solutions:

- Check for any bad valve tubing. Replace any that are broken or cracked. Do not stretch the tubing tight between connections, it will shrink over time.
- Check each of the coils in the valve box for resistance. They should read 170 to 180 ohms.



Caution

Be sure the power is turned OFF at the main control panel.



Reinke Manufacturing Co., Inc.
1040 Road 5300 Deshler, Nebraska 68340
U.S.A. Telephone: 402-365-7251
Fax: 402-365-4371